


GUANGZHOU SANJING
ELECTRIC CO.,LTD

Tel: (86)20 66608588 Fax: (86)20 66608589 Web: www.saj-electric.com
Add: SAJ Innovation Park, No.9, Lizhishan Road, Science City,
Guangzhou High-tech Zone, Guangdong, P.R.China



V1.0

C6-50K-T6-LV-40 / C6-60K-T9-LV-40 / C6-75K-T12-LV-40
C6-75K-T6-40 / C6-99.9K-T9-40 / C6-100K-T9-40 / C6-110K-T12-40 / C6-125K-T12-40

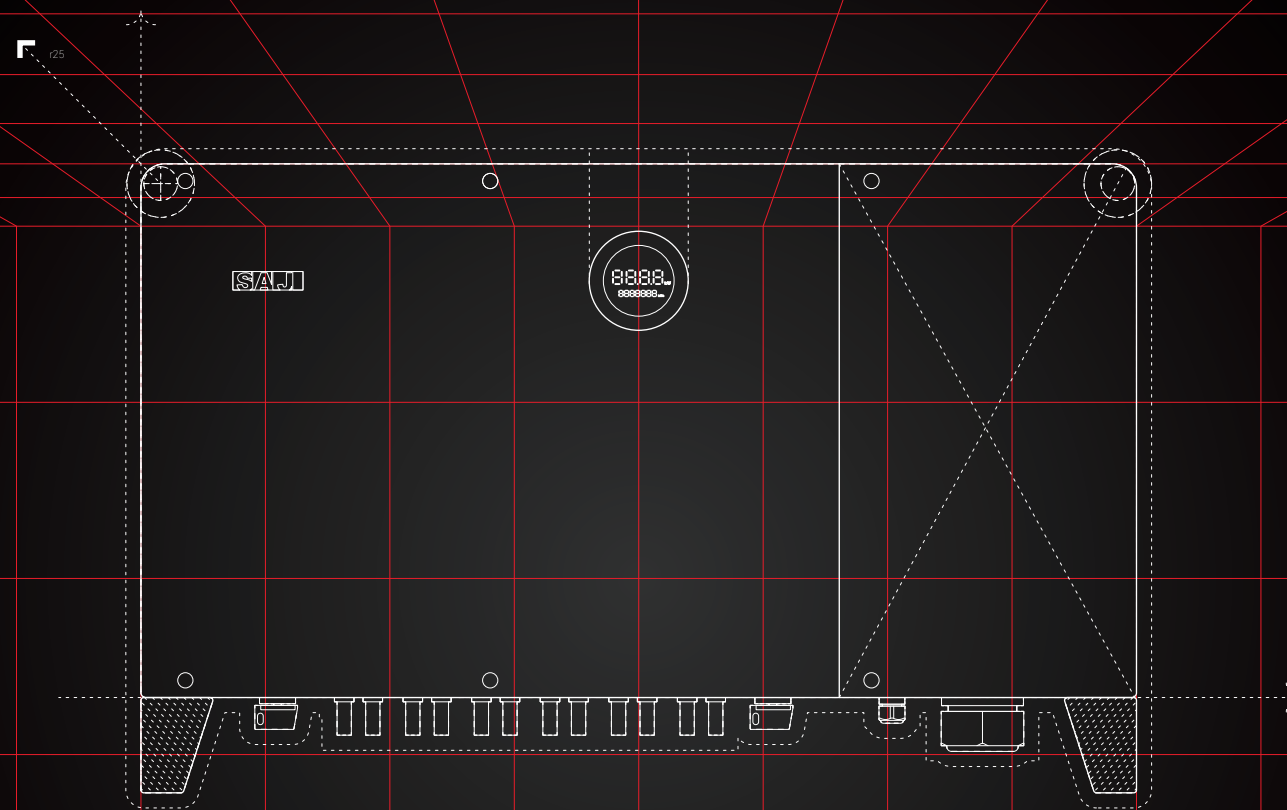


C6 series

**COMMERCIAL ON-GRID
SOLAR INVERTER** User Manual



The World's Leading Provider of Digital Energy
Management Services for Green Buildings

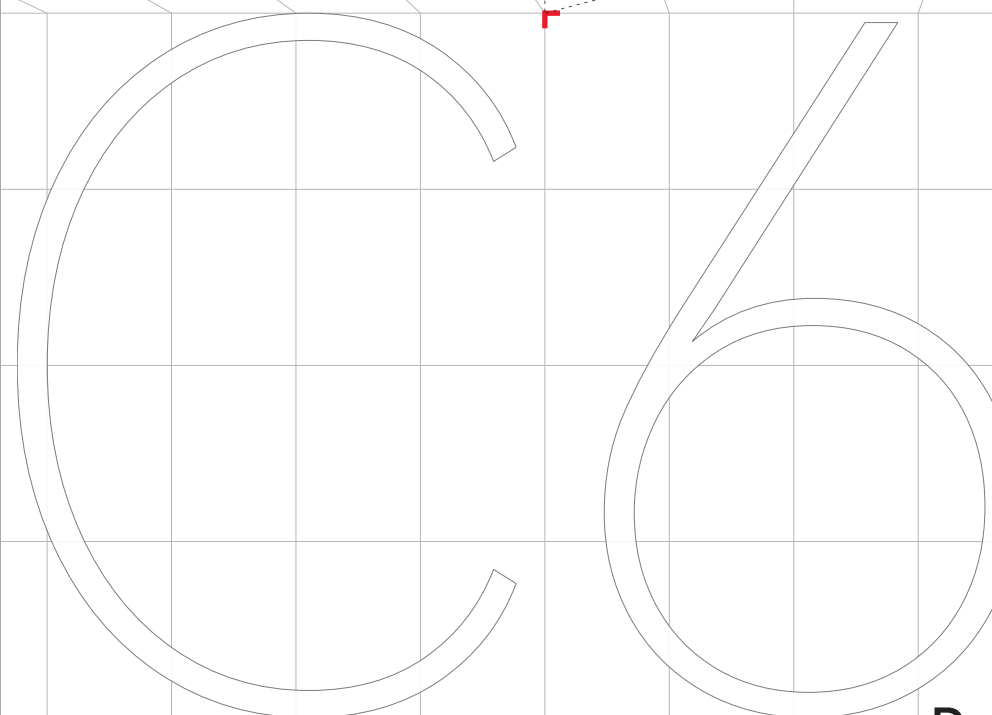

Preface

Thank you for choosing SAJ products. We are pleased to provide you first-class products and exceptional service.

This manual provides information about installation, operation, maintenance, troubleshooting and safety. Please follow the instructions of this manual so that we can ensure delivery of our professional guidance and whole-hearted service.

Customer-orientation is our forever commitment. We hope this document proves to be of great assistance in your journey for a cleaner and greener world.

We make constant improvements on the products and their documentation. This manual is subject to change without notice; these changes will be incorporated in new editions of the publication. To access the latest documentation, visit the SAJ website at <https://www.saj-electric.com/>.

Contents

	1. SAFETY PRECAUTIONS -----P3
	1.1 Scope of Application ----- P4
	1.2 Safety Instructions----- P4
	1.3 Target Group -----P4
	2. SYMBOLS -----P5
	2.1 Symbols -----P6
	2.2 Explanations of Symbols ----- P7
	3. PRODUCT INFORMTION -----P9
	3.1 Application Scope of Products ----- P10
	3.2 Specification for Product Model ----- P11
	3.3 Overview of products ----- P11
	3.4 Dimensions of products ----- P11
	3.5 Datasheet ----- P12
	4. INSTRUCTION FOR INSTALLATION ----- P19
	4.1 Safety Instruction ----- P20
	4.2 Pre-installation Check ----- P20
	4.2.1 Check the Package ----- P20
	4.2.2 Scope of Delivery ----- P20
	4.3 Determine the Installation Method and Position ----- P20
	4.4 Mounting Procedure ----- P21
	4.4.1 Wall Mounting ----- P21
	4.4.2 Bracket Installation ----- P23
	5. ELECTRICAL CONNECTION ----- P25
	5.1 Safety Instruction ----- P26
	5.2 Specifcation for Electrical Interface ----- P26
	5.3 AC Connection ----- P27
	5.3.1 Electrical Connection Overview ----- P27

	5.3.2 AC Cable Specification ----- P27
	5.3.3 Circuit Breaker Specification ----- P27
	5.3.4 OT/DT Terminal Specification ----- P28
	5.3.5 Connection of Additional Grounding ----- P28
	5.3.6 AC Side Electrical Connection ----- P29
	5.4 DC Side Electrical Connection ----- P29
	5.4.1 DCCableSpecification ----- P29
	5.4.2 PV Connector Assembly ----- P30
	5.5 Communication Connection ----- P32
	5.5.1 Communication Terminal Overview ----- P32
	5.5.2 Dry Contact Connection ----- P32
	5.6 RS485 Communication Connection ----- P34
	5.7 RS232/USBConnection ----- P36
	6. COMMISSIONING ----- P37
	6.1 Introduction of LED Panel ----- P38
	6.2 Installer APP Installation ----- P39
	6.2.1 Set up Bluetooth Connection ----- P39
	6.2.2 Complete the Initialization Settings ----- P40
	7. ERROR CODE AND TROUBLESHOOTING ----- P41
	7.1 Error Code----- P42
	7.2 Troubleshooting ----- P43
	8. ROUTINE MAINTENANCE ----- P45
	Inverter Cleaning ----- P46
	Heat Sink Cleaning ----- P46
	9. APPENDIX ----- P47



Safety Precautions

1.1 Scope of Application

This user manual describes the instructions and detailed procedures for installing, operating, maintaining, and troubleshooting the following SAJ on-grid inverters:

**C6-75K-T6-40 / C6-99.9K-T9-40 / C6-100K-T9-40 /
C6-110K-T12-40 / C6-125K-T12-40
C6-50K-T6-LV-40 / C6-60K-T9-LV-40 / C6-75K-T12-LV-40**

1.2 Safety Instructions


	DANGER
· DANGER indicates a hazardous situation, which, if not avoided, will result in death or serious injury.	
	WARNING
· WARNING indicates a hazardous situation, which, if not avoided, can result in death or serious injury or moderate injury.	
	CAUTION
· CAUTION indicates a hazardous condition, which, if not avoided, can result in minor or moderate injury.	
	NOTICE
· NOTICE indicates a situation that can result in potential damage, if not avoided.	

1.3 Target Group

Only qualified electricians who have read and fully understood all safety regulations contained in this manual can install, maintain and repair the inverter. Operators must be aware of the high-voltage device.



Symbols

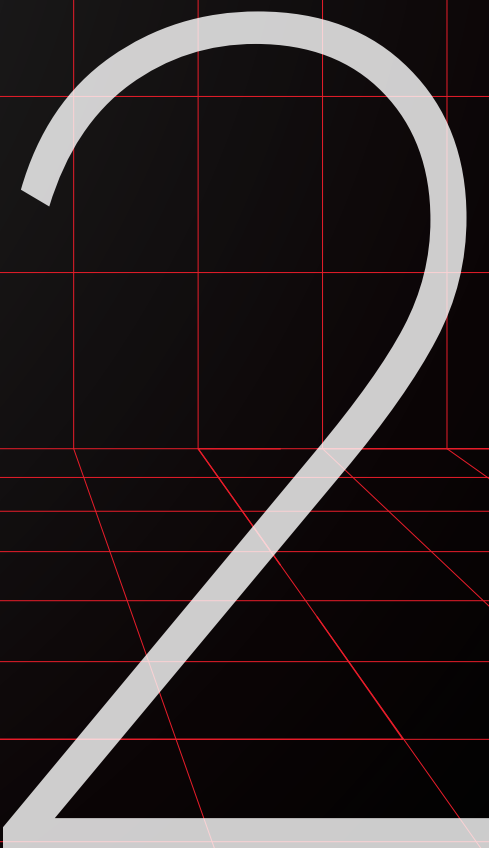

2.1 Symbols

**DANGER**

- Possible danger to life due to electrical shock and high voltage.
- Do not touch non-insulated parts or cables.
- Disconnect the inverter from voltage sources and make sure it cannot be reconnected before working on the device.
- Do not disconnect the DC connector under load.
- Do not touch the live parts and cables inside the inverter during operation, it might result in burning or death.
- To prevent risk of electric shock during installation and maintenance, please make sure that all AC and DC terminals are disconnected.
- Do not touch the surface of the inverter while the housing is wet, otherwise, it might cause electrical shock.
- Do not stay close to the inverter while there are severe weather conditions including storm, lighting, etc.
- Before opening the housing, the SAJ inverter must be disconnected from the grid and PV array; you must wait for at least five minutes to let the energy storage capacitors completely discharged after disconnecting from the power source.

**WARNING**

- Danger to life due to fire or explosion.
- In the event of fault, do not conduct any direct action on the inverter.
- Disconnect PV array from inverter via an external disconnection device. If there is no external disconnection device present, wait until no more DC power is applied to the inverter.
- Disconnect the AC circuit breaker, or keep it disconnect if it is tripped, and secure it against reconnection.
- Do not touch non-insulated parts or cables.
- Do not touch non-insulated parts or cables.
- The installation, service, recycling and disposal of the inverters must be performed by qualified personnel only in compliance with national and local standards and regulations.
- Any unauthorized actions including modification of product functionality of any form may cause lethal hazard to the operator, third parties, the units or their property. SAJ is not responsible for the loss and these warranty claims.
- The SAJ inverter must only be operated with PV generator. Do not connect any other

**CAUTION**


- The solar inverter enclosure will become hot during operation. Please do not touch the heat sink or enclosure during operation.
- Risk of damage due to improper modifications.

**NOTICE**

- Public utility grid only.
- The solar inverter is designed to feed AC power directly to the public utility power grid; do not connect AC output of the inverter to any private AC equipment.

2.2
Explanations of Symbols

Symbol	Description
	Dangerous electrical voltage This device is directly connected to public grid, thus all work to the inverter
	Danger to life due to high electrical voltage! There might be residual currents in inverter because of large capacitors. Wait for 5 minutes before you remove the front lid.
	Notice, danger! This is directly connected with electricity generators and public grid.
	Danger of hot surface The components inside the inverter will release a lot of heat during operation.
	An error has occurred See Chapter “Troubleshooting” to remedy the error.
	This device shall not be disposed of in residential waste See Chapter “Recycling and Disposal” for proper treatments.
	CE Mark Equipment with the CE mark fulfills the basic requirements of the Guideline Governing Low-Voltage and Electro-magnetic Compatibility.
	CQC Mark The inverter complies with the safety instructions from China's Quality Center.

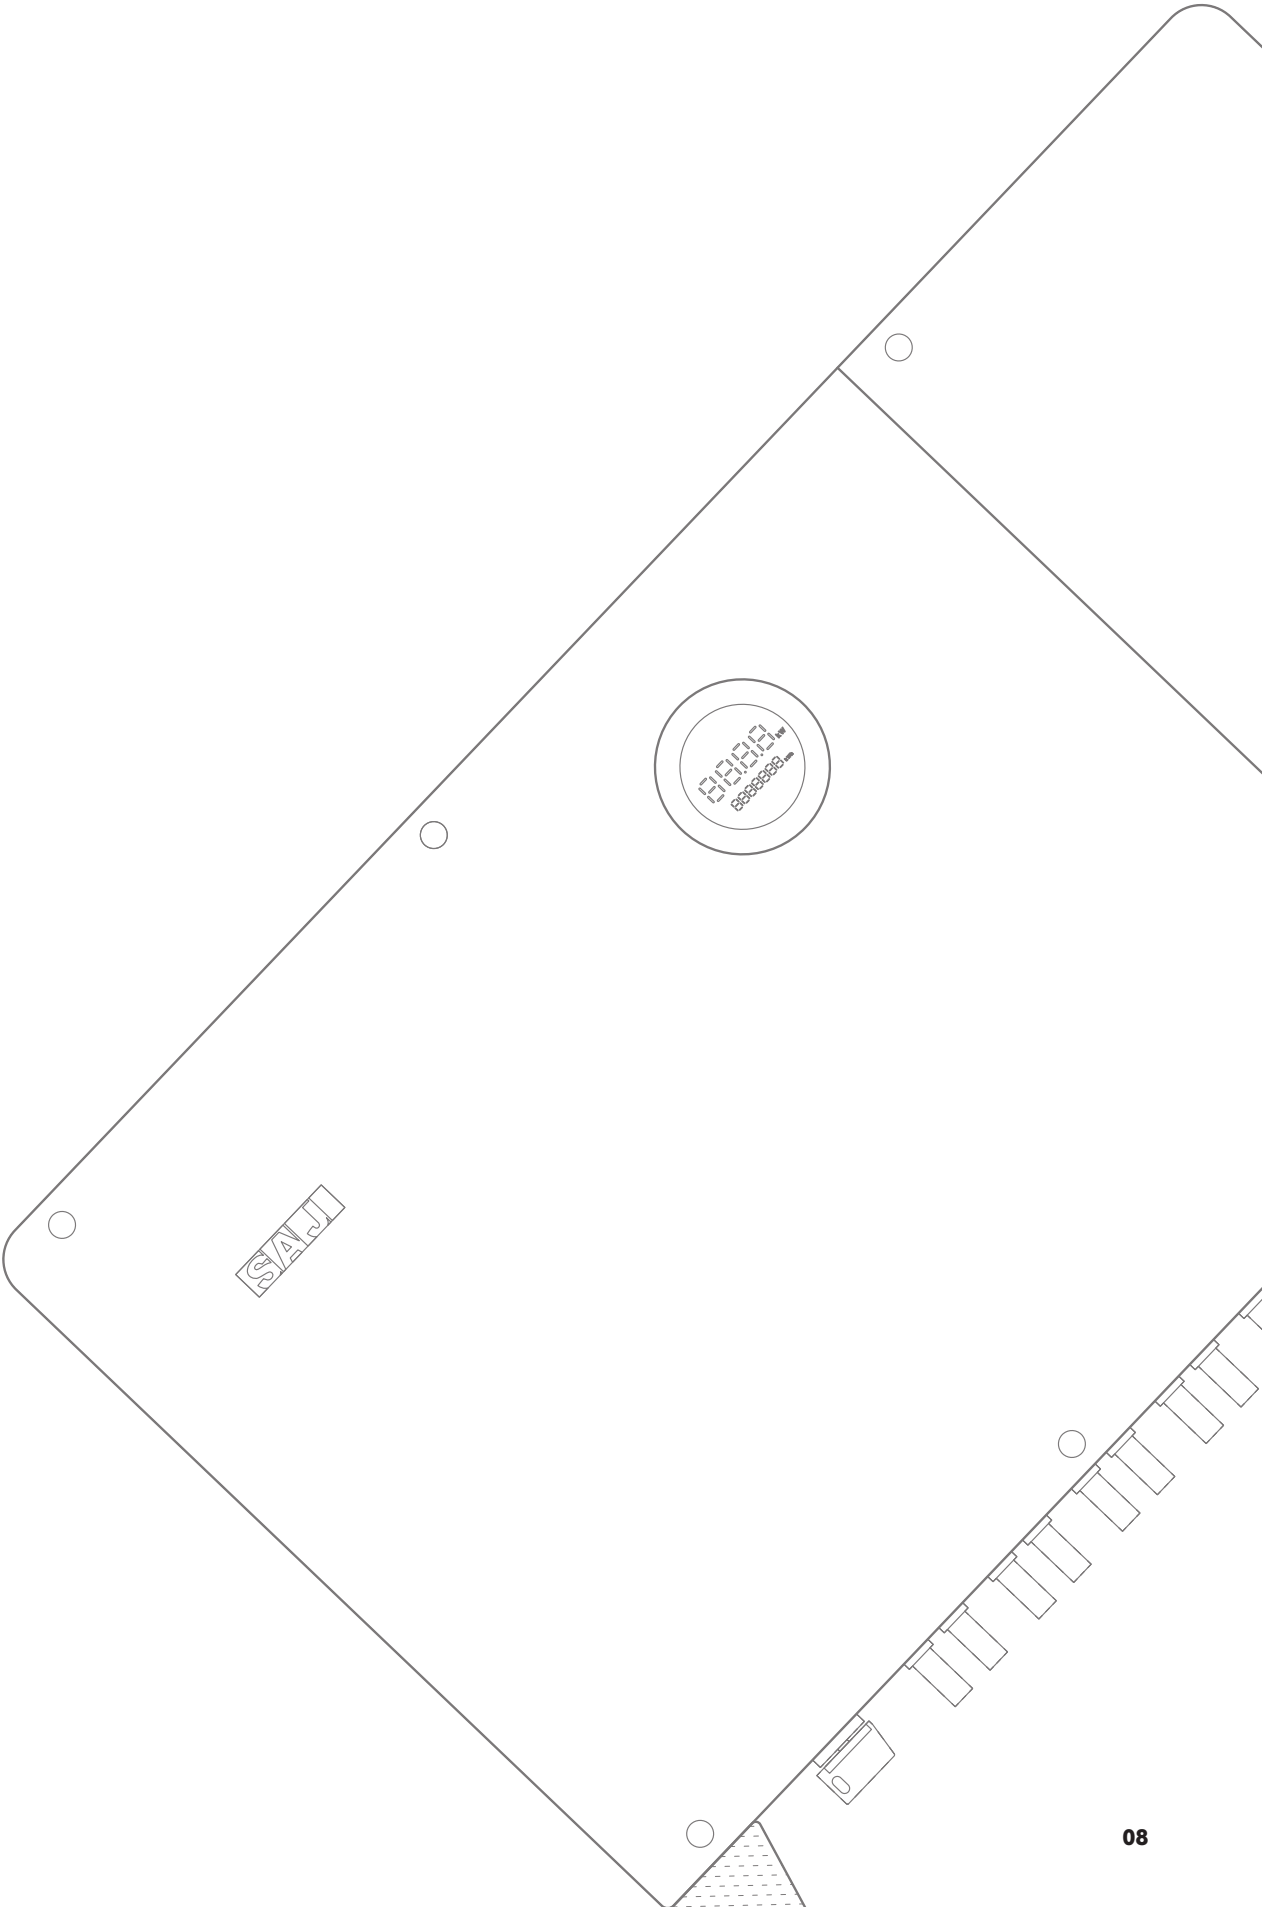



Product Information

3

3.1 Application Scope of Products

C6 series products are grid-tied three-phase inverters without transformers. The product converts the DC electricity generated by PV array into AC electricity that meets the public grid requirements and regulations. The C6 inverters then feed the AC electricity to the grid.

Figure 3.1 shows the structural diagram of the typical system application of C6 series inverters.

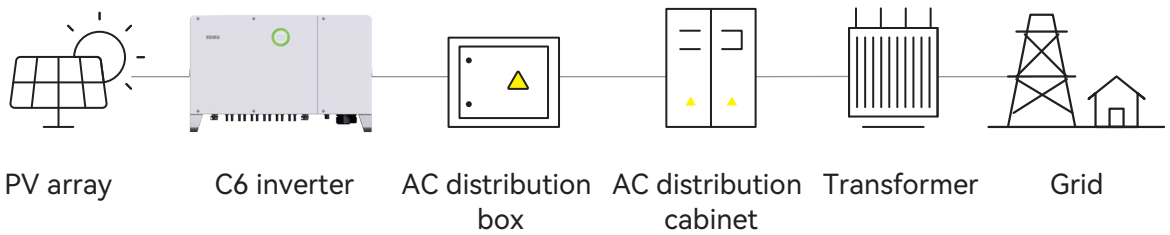


Figure 3.1
C6 series application

C6 Applicable Grid

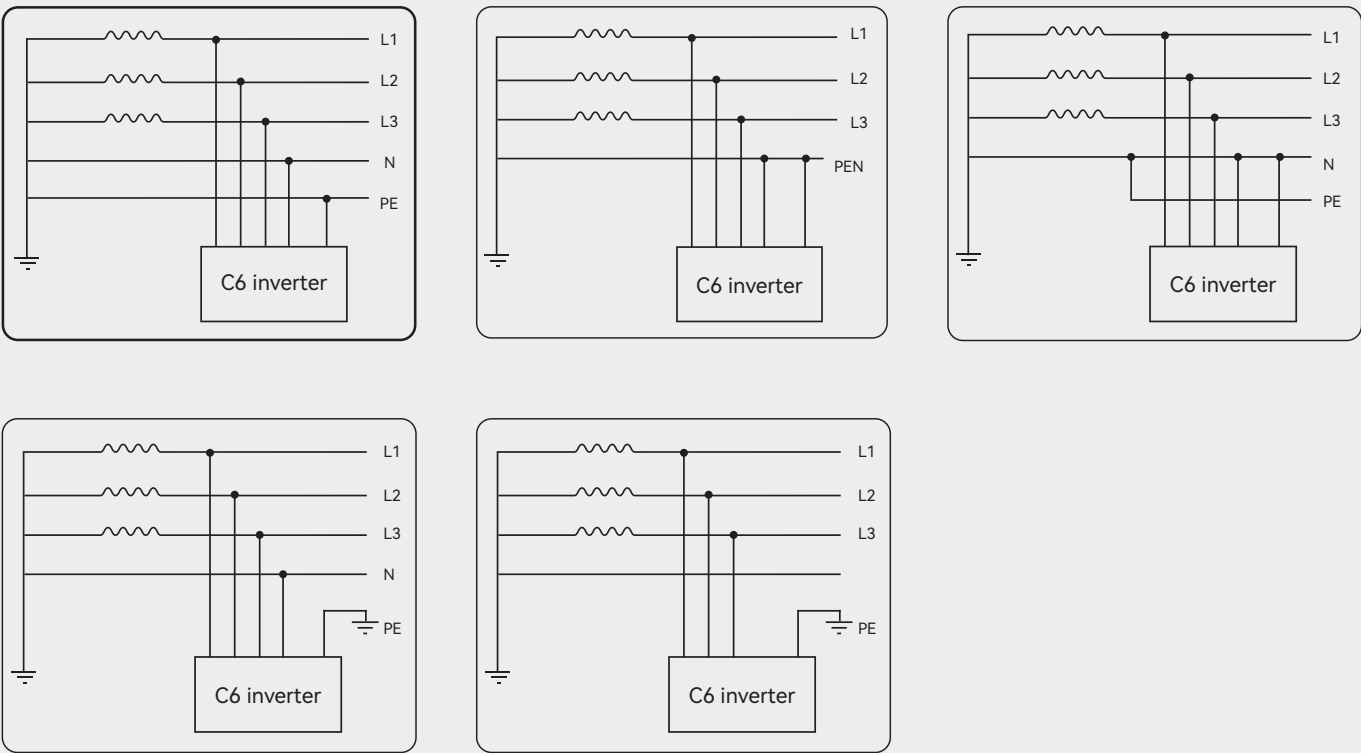


Figure 3.2
C6 applicable grid


3.2
 Specification for
 Product Model

3.3
 Overview of products

C6 - xK - Tx - LV - 40


① ② ③ ④ ⑤

- ① C6 is the product name.
- ② xK means the rated power of the inverter in xkW, for example, 125K means 125 kW.
- ③ T means three phase; X represents the number of MPPT of the inverter.
- ④ LV means that the AC output voltage is 220 V; When no LV suffix is present, the AC output voltage is 380V/400V
- ⑤ 40 means that the maximum DC input current per MPP tracker is 40 A.

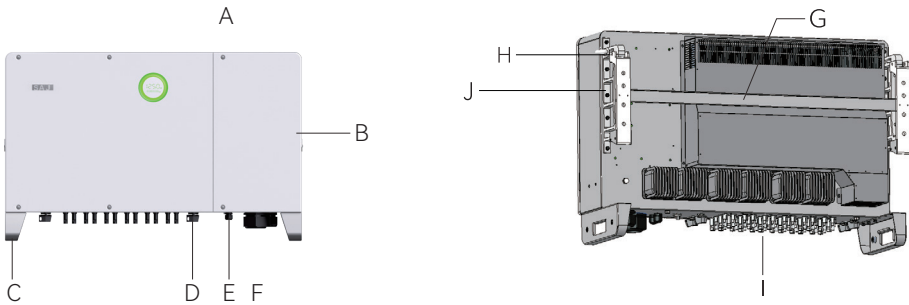

Callout	Name
A	LED Display Board
B	Wiring Cabinet Cover
C	Handle (base)
D	DC Switch
E	Communication Port
F	AC Output
G	Mounting Bracket (beam)
H	Mounting Bracket (side hanger)
I	DC Input
J	Handle (side)

3.4
 Dimensions of products

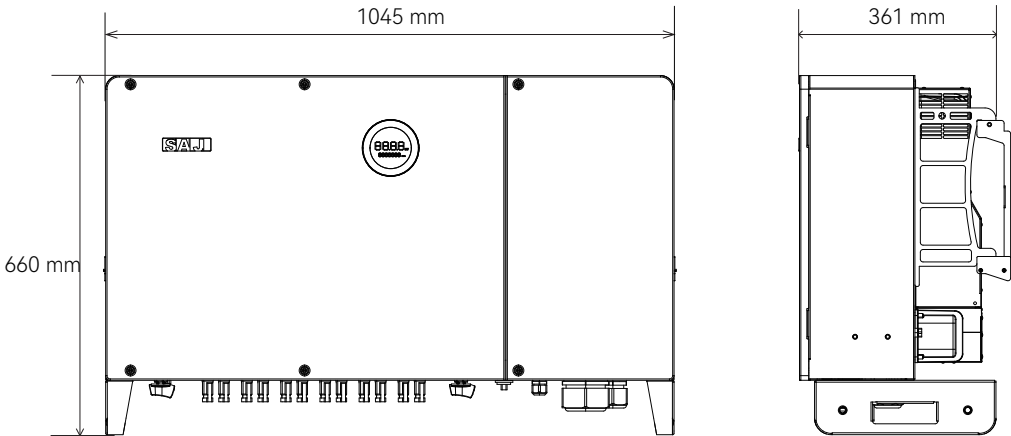

3.5
 Datasheet

C6-(75K, 99.9K, 100K, 110K, 125K)-(T6, T9, T12)-40

Model	C6-75K-T6-40	C6-99.9K-T9-40	C6-100K-T9-40	C6-110K-T12-40	C6-125K-T12-40
Input (DC)					
Max. PV Array Power [kWp]@STC	144	200	200	220	250
Max. Input Voltage [V]	1100 ^{*1}				
MPP Voltage Range [V]	180-1000 ^{*2}				
Nominal Input Voltage [V]	600				
Startup Voltage [V]	200				
Min. Input Voltage [V]	180				
Max. Input Current [A]	6*40	9*40		12*40	
Max. Short-Circuit Current [A]	6*50	9*50		12*50	
Number of Strings per MPP Tracker	2				
Number of MPP Trackers	6	9		12	
DC Switch	Integrated				
Output (AC)					
Rated AC Output Power [kW]	75	99.9	100	110	125
Max. AC Output Power [kW]	82.5	99.9	110	121	125
Max. AC Apparent Power [kVA]	82.5	99.9	110	121	125
Rated AC Output Current [A]	108.3	144.2	144.3	158.8	180.4
Max. AC Output Current [A]	119.1	144.2	158.8	174.6	180.4
Nominal AC Voltage [V]	3+N+PE, 230/400				
Nominal AC Grid Frequency/ Range [Hz]	50 Hz: 44-55; 60 Hz: 54-65				
Total Distortion Harmonic [THDi]	<3%				
Adjustable Power Factor	0.8 leading-0.8 lagging				
Feed-in phases/AC connection phases	3/3				
Efficiency					
Max. Efficiency	98.8%				
Euro. Efficiency	98.5%				

*1 Make sure the maximum input voltage of each string does not exceed 1100 V.

*2 When the input voltage varies within the range of 1000 V to 1100 V, the inverter will enter the standby mode. When the input voltage decreases to a value within the MPPT operating voltage range of 180 V to 1000 V, the inverter will enter the normal mode.

Model	C6-75K-T6-40	C6-99.9K-T9-40	C6-100K-T9-40	C6-110K-T12-40	C6-125K-T12-40
Protection					
PV String Current Monitoring	Integrated				
Internal Temperature Detection	Integrated				
Residual Current Monitoring Unit	Integrated				
DC Insulation Resistance Detection	Integrated				
Anti-islanding Protection	Integrated				
DC Reverse Polarity Protection	Integrated				
DC Surge Protection	Type II				
AC Surge Protection	Type II				
AC Overcurrent Protection	Integrated				
AC Short-Circuit Protection	Integrated				
AC Overvoltage Protection	Integrated				
AFCI Protection	Optional				
PID Recovery	Optional				
Interface					
AC Connection	OT/DT Terminal (Max. 240 mm²)				
DC Connection	MC4				
Display	LED+App (Bluetooth)				
Communication Port	RS232 + RS485				
Communication Mode	Wi-Fi/Ethernet/4G/PLC (optional)				
General Data					
Topology	Non-isolated				
Nighttime Power Consumption [W]	<2				
Operating Temperature Range	-30°C to +60°C (45°C to 60 °C with derating)				
Cooling Method	Intelligent fan cooling				
Ambient Humidity Max. Operating Altitude [m]	0%-100% non-condensing 4000 (>3000 power derating)				

Model	C6-75K-T6-40	C6-99.9K-T9-40	C6-100K-T9-40	C6-110K-T12-40	C6-125K-T12-40
General Data					
Ingress Protection	IP66				
Mounting	Wall mounting				
Dimensions [H*W*D][mm]	1045*660*361				
Weight [kg]	93		98		
Warranty [Year]	5 (Standard)/10/15/20 (Optional)				
Certifications	EN50549-2, IEC/EN62109-1/2, EN61000-6-2/4, PPDS, RD1669, RD413, UNE217001, IEC 62116, IEC61727, G99, CEI 0-16, C10/11				

C6-(50K, 60K, 75K)-(T6, T9, T12)-LV-40


Model	C6-50K-T6-LV-40	C6-60K-T9-LV-40	C6-75K-T12-LV-40
Input (DC)			
Max. PV Array Power [kWp]@STC	100	120	150
Max. Input Voltage [V]	1100*1		
MPP Voltage Range [V]	180-1000*2		
Nominal Input Voltage [V]	380		
Startup Voltage [V]	200		
Min. Input Voltage [V]	180		
Max. Input Current [A]	6*40	9*40	12*40
Max. Short-Circuit Current [A]	6*50	9*50	12*50
Number of Strings per MPP Tracker	2		
Number of MPP Trackers	6	9	12
DC Switch	Integrated		
Output (AC)			
Rated AC Output Power [kW]	50	60	75
Max. AC Output Power [kW]	55	60	75
Max. AC Apparent Power [kVA]	55	60	75
Rated AC Output Current [A]	131.2	157.5	196.8
Max. AC Output Current [A]	144.3	157.5	196.8
Nominal AC Voltage [V]	3+N+PE, 127/220		
Nominal AC Grid Frequency/ Range [Hz]	50 Hz: 44-55; 60 Hz: 54-65		
Total Distortion Harmonic [THDi]	<3%		
Adjustable Power Factor	0.8 leading-0.8 lagging		
Feed-in phases/AC Connection Phases	3/3		
Efficiency			
Max. Efficiency	98.8%		
Euro. Efficiency	98.5%		

*1 Make sure the maximum input voltage of each string does not exceed 1100 V.

*2 When the input voltage varies within the range of 1000 V to 1100 V, the inverter will enter the standby mode. When the input voltage decreases to a value within the MPPT operating voltage range of 180 V to 1000 V, the inverter will enter the normal mode.


Model	C6-50K-T6-LV-40	C6-60K-T9-LV-40	C6-75K-T12-LV-40
Protection			
PV String Current Monitoring	Integrated		
Internal Temperature Detection	Integrated		
Residual Current Monitoring Unit	Integrated		
DC Insulation Resistance Detection	Integrated		
Anti-islanding Protection	Integrated		
DC Reverse Polarity Protection	Integrated		
DC Surge Protection	Type II		
AC Surge Protection	Type II		
AC Overcurrent Protection	Integrated		
AC Short-Circuit Protection	Integrated		
AC Overvoltage Protection	Integrated		
AFCI Protection	Optional		
PID Recovery	Optional		
Interface			
AC Connection	OT/DT Terminal (Max. 240 mm²)		
DC Connection	MC4		
Display	LED+App (Bluetooth)		
Communication Port	RS232+RS485		
Communication Mode	Wi-Fi/Ethernet/4G/PLC (optional)		
General Data			
Topology	Non-isolated		
Nighttime Power Consumption [W]	<2		
Operating Temperature Range	-30°C to +60°C (45°C to 60 °C with derating)		
Cooling Method	Intelligent fan cooling		
Ambient Humidity	0%-100% Non-condensing		

Model	C6-50K-T6-LV-40	C6-60K-T9-LV-40	C6-75K-T12-LV-40
General Data			
Max. Operating Altitude [m]	4000 (>3000 Power Derating)		
Ingress Protection	IP66		
Mounting	Wall mounting		
Dimensions [H*W*D][mm]	660*1045*361		
Weight [kg]	93	98	
Warranty [Year]	5 (Standard)/10/15/20 (Optional)		
Certifications	IEC/EN62109-1/2, EN61000-6-1/2/3/4		

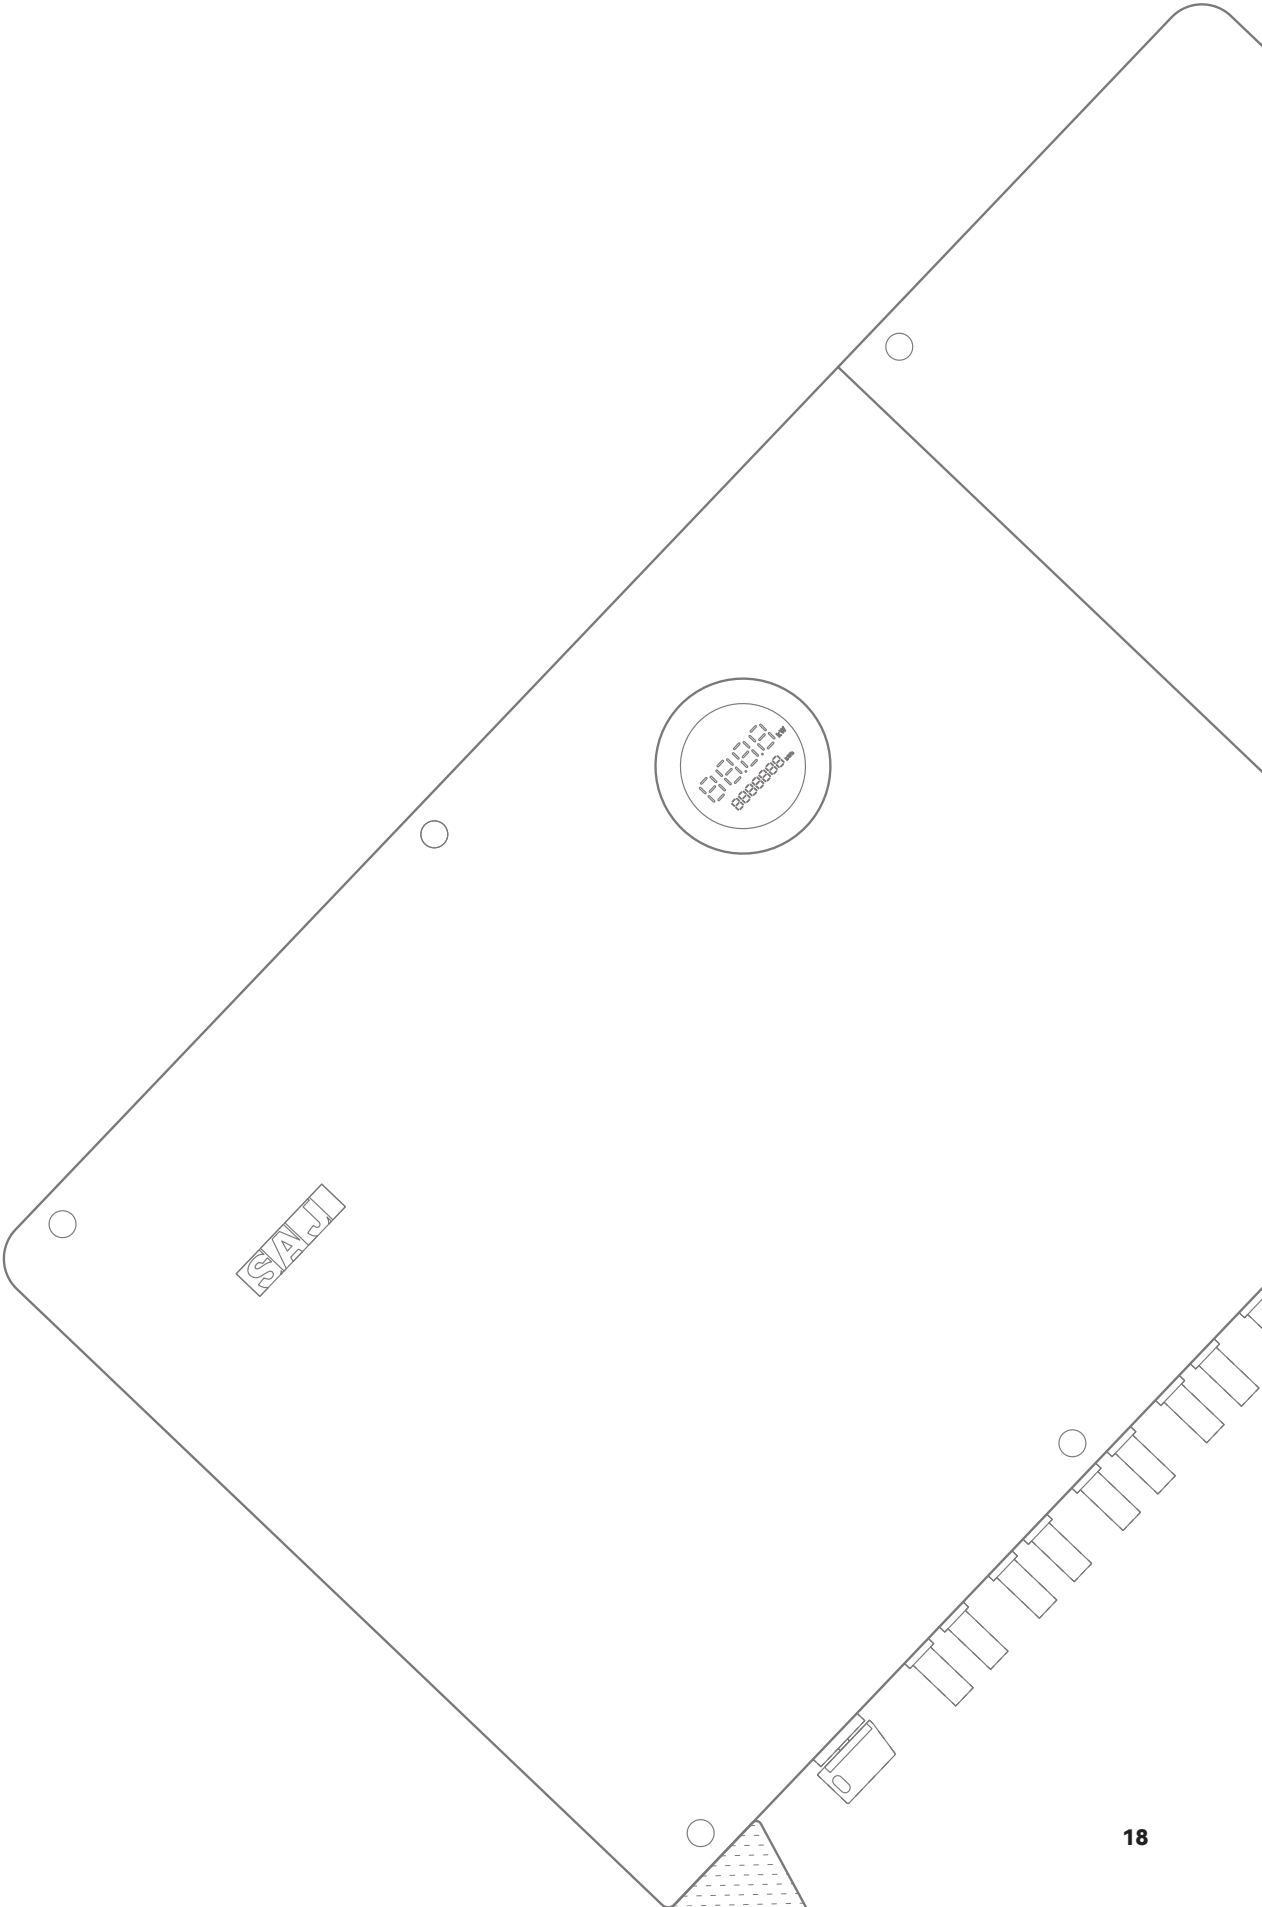



Instruction for Installation

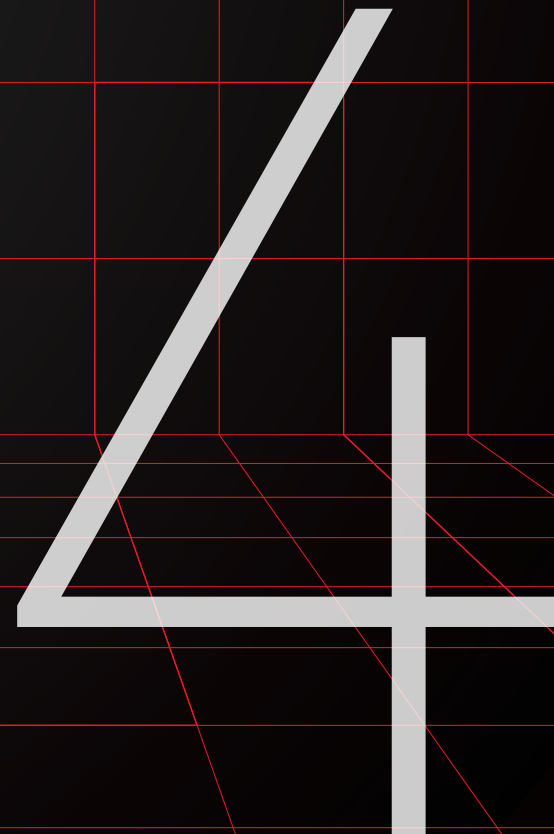

4.1

Safety Instruction

DANGER

- Dangerous to life due to potential fire or electricity shock.
- Do not install the inverter near any inflammable or explosive items.
- This inverter will be directly connected with HIGH VOLTAGE power generation device; the installation must be performed by qualified personnel only in compliance with national and local standards and regulations.

NOTICE

- This equipment meets the pollution degree II.
- Inappropriate installation environment may jeopardize the life span of the inverter.
- Installation directly exposed under intensive sunlight is not recommended.
- The installation site must be well ventilated.

4.2

Pre-installation Check

4.2.1

Check the Package

Although SAJ' s inverters have thoroughly tested and are checked before delivery, it is uncertain that the inverters may suffer damages during transportation. Please check the package for any obvious signs of damage, and if such evidence is present, do not open the package and contact your dealer as soon as possible.

4.2.2

Scope of Delivery

Please refer to the packing list inside the package container.

4.3

Determine the Installation Method and Position

4.3.1

Mounting Methods


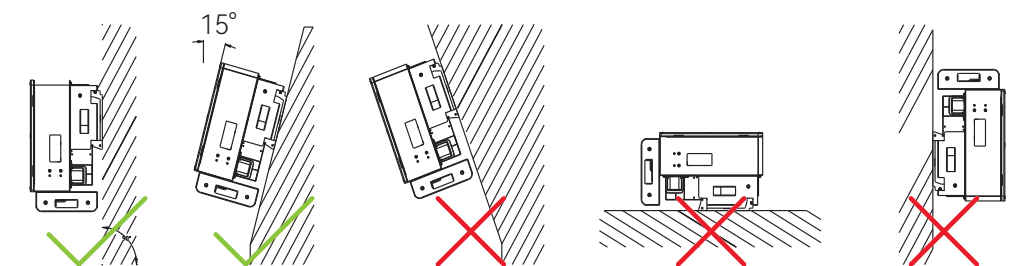


Fig 4.1
Mounting methods

- ① The equipment employs natural convection cooling, and it can be installed indoor or outdoor.
- ② Vertical installation on eye level is recommended. Mount vertically or tilted backwards by max. 15 degrees. Never install the inverter tilted forwards, sideways, horizontally or upside down.
- ③ Considering convenience for maintenance, please install the equipment at eye level.
- ④ When mounting the inverter, please consider the solidity of wall for inverter, including accessories, make sure the wall has enough strength to hold the screws and bear the weight of products. Please ensure the mounting bracket mounted tightly.

DO NOT expose the inverter to direct solar irradiation as this could cause power derating due to overheating.
The ambient temperature should be within the range from -30°C to $+60^{\circ}\text{C}$ (-22°F to $+140^{\circ}\text{F}$) to ensure optimum operation.
Choose locations with sufficient air exchange. Ensure additional ventilation, if necessary.
DO NOT install the inverter near any inflammable and explosive items.
The inverter generates noise during operation; therefore, it is not recommended to install the inverter in living areas.

Fig 4.2
Installation clearance

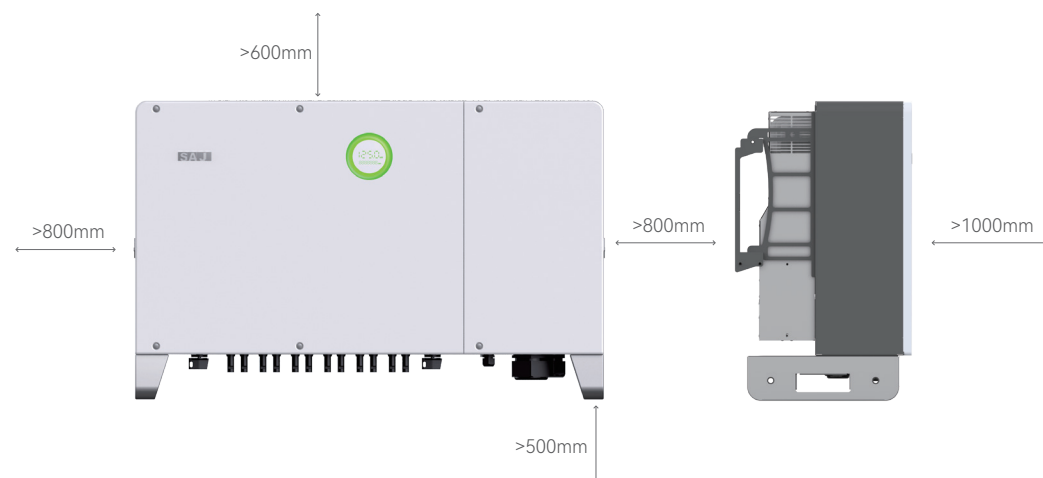

4.4 Mounting Procedure

4.4.1 Wall Mounting

Fig 4.3
Dimensions of the mounting bracket

Place the mounting bracket onto the wall and mark the positions of the holes.
(Measurement unit: mm)


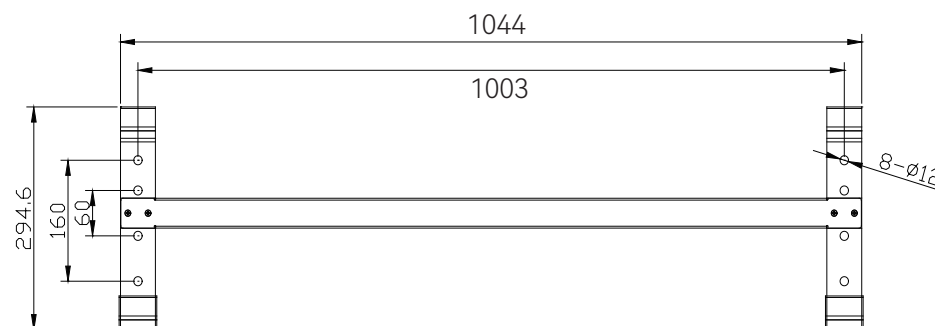


Fig 4.4
Drilling the holes

Drill Holes and Place the Expansion Tubes


Drill eight holes in the wall, and then insert expansion tubes in the holes using a rubber mallet.

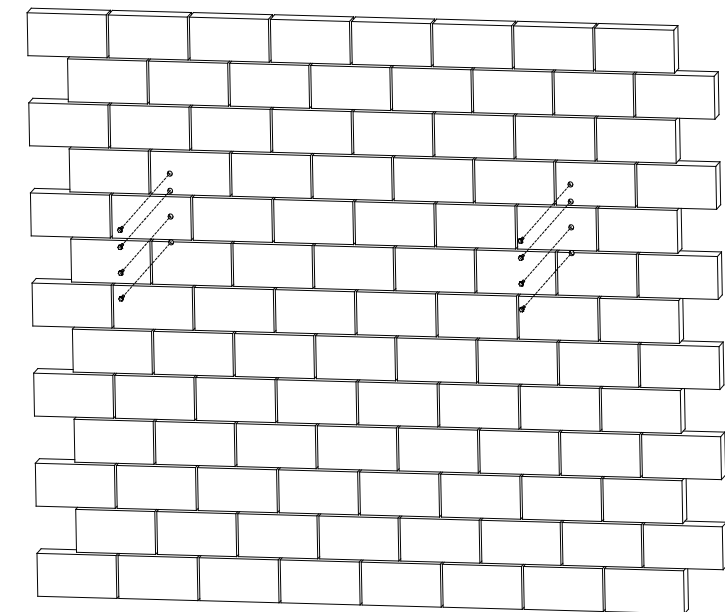

Mount the Screws and the Mounting Bracket

Install the mounting bracket onto the wall and secure it by screws.

Fig 4.5
Securing the mounting bracket

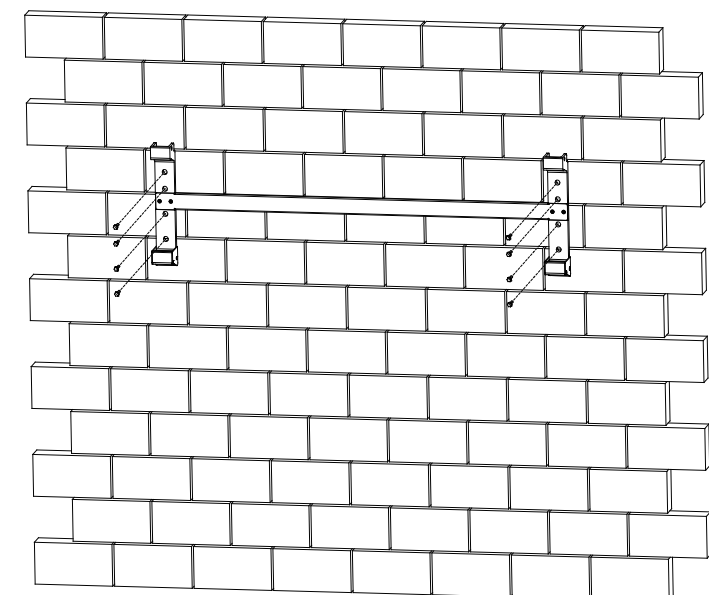

Mount the Inverter

Carefully mount the inverter to the mounting bracket. Make sure that the rear part of the inverter is closely mounted to the mounting bracket.

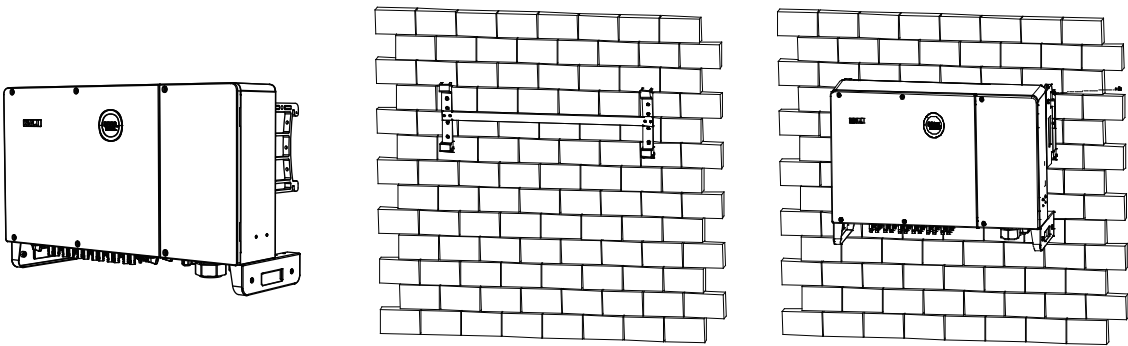


Fig 4.6
Mounting the inverter

Mount the Screws and the Mounting Bracket

Secure the mounting brackets with screws.

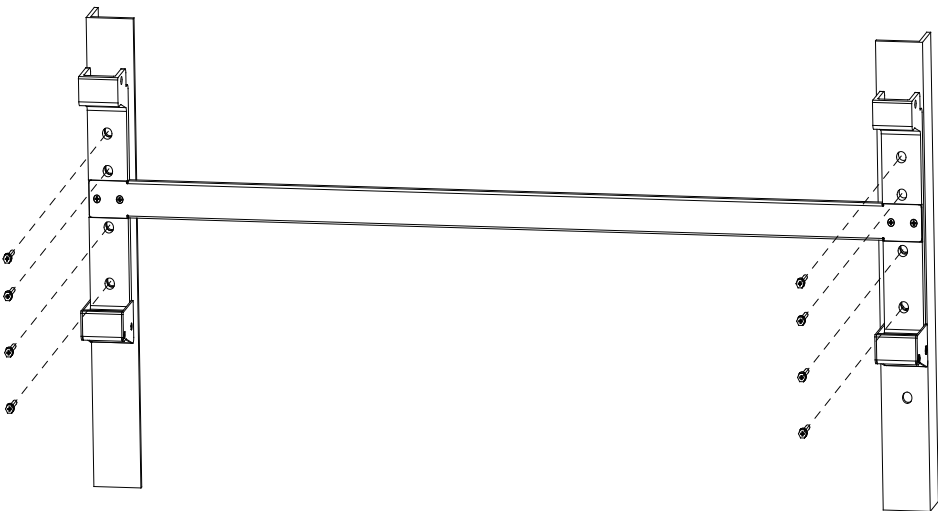


Fig 4.9
Installing the mounting bracket

4.4.2
Bracket Installation

Mark the Positions of the Drill Holes of the Mounting Bracket

Mark the drilling positions of the mounting bracket.
(Measurement unit: mm)

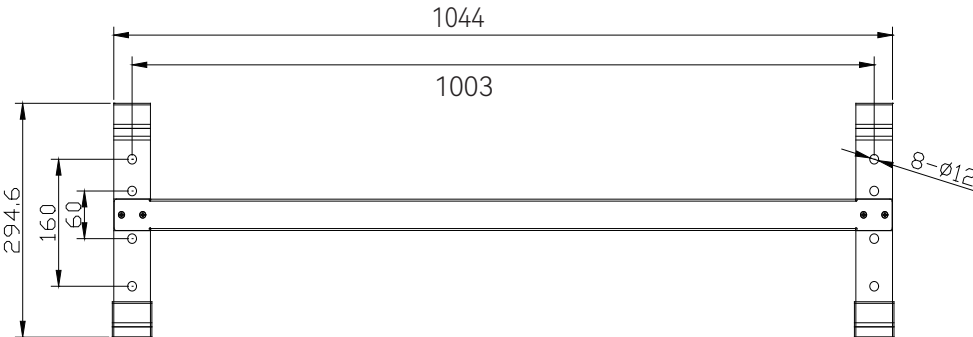


Fig 4.7
Dimensions of mounting bracket

Drill Holes and Place the Expansion Tubes

Drill eight holes in the wall, and then place expansion tubes in the holes using a rubber mallet.

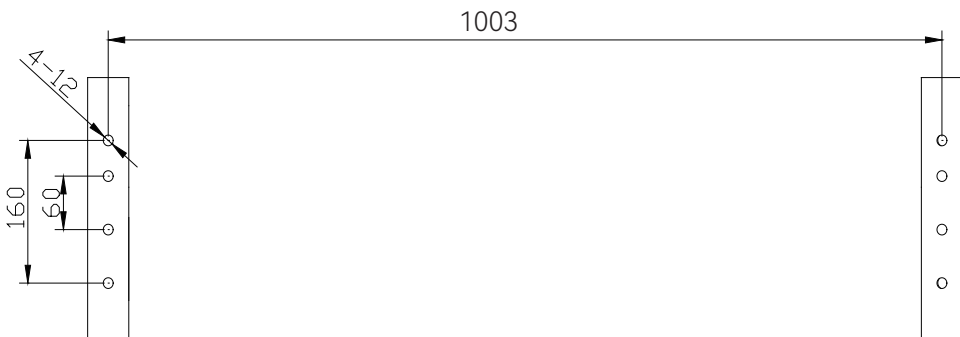


Fig 4.8
Drilling the holes

Mount the Inverter

Carefully mount the inverter to the mounting bracket and secure the inverter with a screw. Make sure that the rear part of the equipment is closely mounted to the mounting bracket.

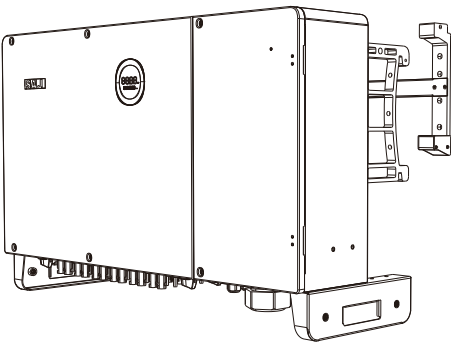


Fig 4.10
Mounting the inverter

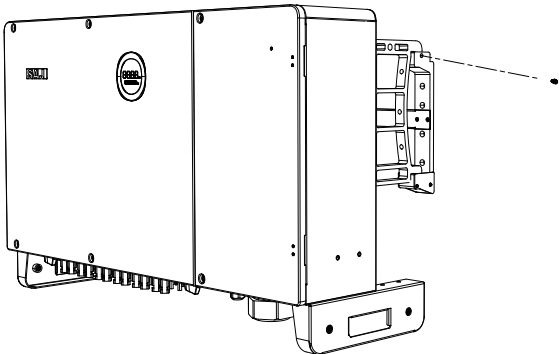


Fig 4.10
Securing the inverter

Electrical Connection

5.1 Safety Instruction

Electrical connection must only be operated on by professional technicians. Please keep in mind that the inverter is a bi-power supply equipment. Before connection, necessary protective equipment must be employed by technicians, including insulating gloves, insulating shoes and safety helmet.

 **DANGER**

- Dangerous to life due to potential fire or electricity shock.
- The PV panel string will produce lethal high voltage when exposed to sunlight.
- Disconnect DC and AC circuit breakers before starting electrical connections.
- Ensure all the cables have no voltage before conducting cable connection.

 **WARNING**

- Any improper operations during cable connection can cause device damage or personal injury.
- All cables must be undamaged, firmly attached, properly insulated and dimensioned.

 **NOTICE**

- When power-on, the equipment should be in conformity with local rules and regulations.
- The direct connection between the inverter and high voltage power systems must be operated by qualified technicians in accordance with local and national power grid standards and regulations.

5.2 Specification for Electrical Interface

Figure 5.1
Electrical terminals

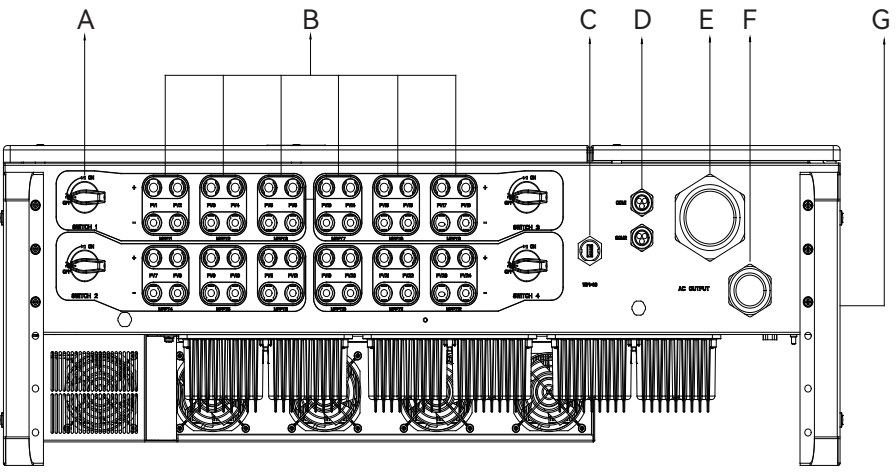



Table 5.1
Specifications for interface

Callout	Name
A	DC Switch
B	DC Input
C	RS232 Communication
D	RS485 Communication
E	AC Output
F	Ground Connection
G	Ground Connection

5.3
AC Connection

5.3.1
Electrical Connection
Overview

Fig 5.2
Electrical connection overview

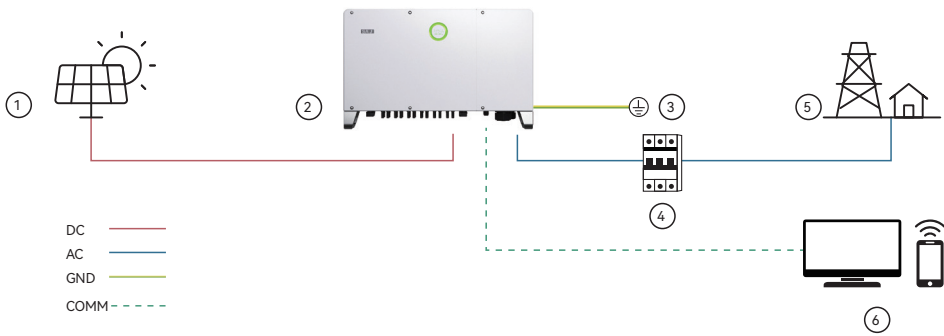

Callout	Name
1	PV Array
2	C6 Inverter
3	Inverter enclosure grounding connection
4	Circuit Breaker
5	Grid
6	Monitoring Platform

Table 5.2
Electrical connection overview

5.3.2
Cable Specification

Table 5.3
Recommended power grid connecting
cable specification

Cross-sectional area of cables(mm ²)			External diameter (mm)
Cable type	Scope (S)	Recommended grounding cable (Spe)	
Three-core, four-core five-core cable	95-240	Spe≥S/2	38-66
Four single-core cable			14-32


5.3.3
Circuit Breaker
Specification

Table 5.4
Recommended circuit breaker specification

Model	Recommended rated voltage	Recommended rated current
C6-75K-T6-40, C6-50K-T6-LV-40	≥400V	160 A
C6-99.9K-T9-40, C6-100K-T9-40, C6-60K-T9-LV-40		200 A
C6-110K-T12-40		225 A
C6-125K-T12-40, C6-75K-T12-LV-40		250 A

5.3.4
OT/DT Terminal
Specification

Fig 5.3
OT/OD terminal

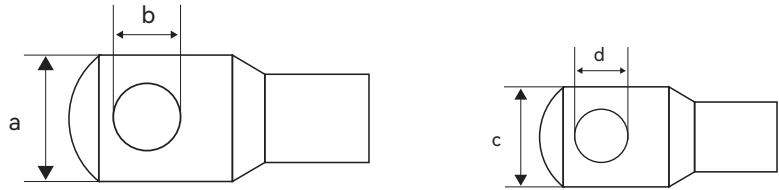

L1/L2/L3/N cable terminal
Specification:

PE cable terminal

L1/L2/L3/N cable terminal	M12 size	a≤46 mm, 13mm≤b≤15.5 mm
PE cable terminal	M8 size	c≤30 mm, 8mm≤d≤11 mm

Note: Do not connect Aluminum OT/DT terminal with AC output terminal, as it will have electrochemical reaction with AC output terminal and affect the reliability of connection. Please choose the OT/OD terminal material according to the cable conductor material as below.

Cable conductor material	Recommended OT/DT terminal material
Copper	Copper
Copper clad aluminum	Copper
Aluminum	Copper to aluminum adapter terminal

Table 5.6
Specification of cable conductor material

5.3.5
Connection of Additional
Grounding


**WARNING**

- The ground connection of this grounding connection cannot replace the AC cable PE terminal connection.
- Make sure that all the grounding points on the enclosures are equipotential connected when there are multiple inverters.
- Connect this grounding cable before AC, DC, and communication cable connections.

Note: The grounding cable and OT/DT terminal should be prepared by user themselves.

Remove the screw of grounding terminal and secure the grounding cable by insert a screw into the screw hole in the OT/DT terminal.


Fig 5.4
Installing additional grounding cable

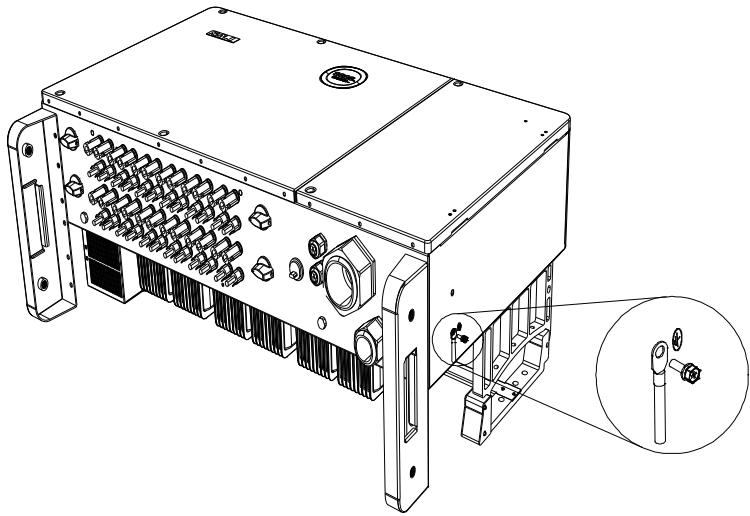

5.3.6
AC Side Electrical Connection

- 1.Strip off wire insulation skin and AC cable insulation skin to a proper length
- 2.Crimp the AC cable with OT/DT terminal
- 3.Disconnect AC circuit breaker, open the wiring cabinet cover
- 4.Insert the cable through waterproof cable gland and housing
- 5.Insert the conductors into the corresponding ports and fix it with screws
- 6.Secure the cable gland by fastening sealing nut
- 7.Plug the AC connector into the AC connector port of inverter

Fig 5.5
AC side electrical connection

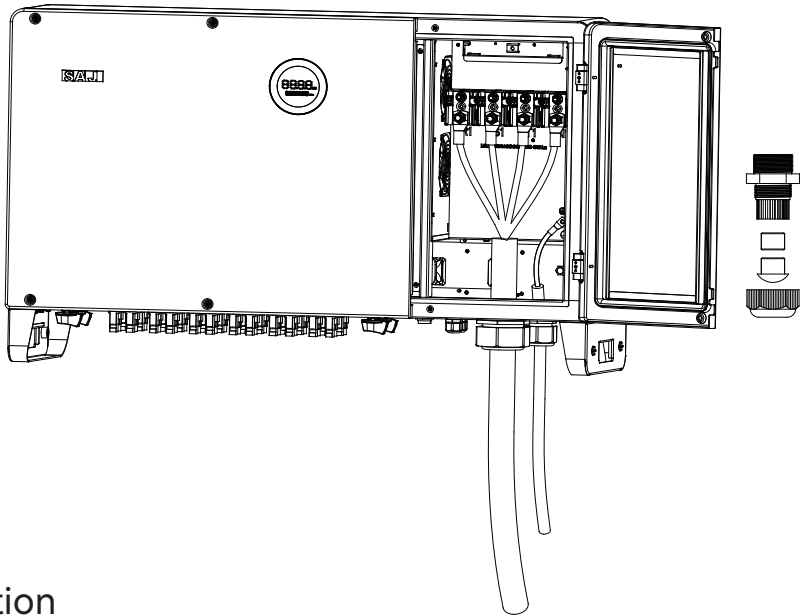

5.4
DC Side Electrical Connection

5.4.1
DC cable specification

Table5.7
Recommended specifications of DC cables

Cross-sectional area of cables(mm²)	Cable external diameter range (mm)
Scope	6-9
4≤S≤6	

5.4.2
PV Connector Assembly

DANGER


- Dangerous to life due to electric shock when live components or DC cables are touched.
- The PV panel string will produce lethal high voltage when exposed to sunlight. Touching live DC cables results in death or lethal injuries.
- DO NOT touch non-insulated parts or cables.
- Disconnect inverter from voltage sources.
- DO NOT disconnect DC connectors under load.

WARNING

- Make sure the PV array is well insulated to ground before connecting it to the inverter.
- Make sure the maximum input voltage of each string does not exceed 1100 V.
- When the input voltage varies within the range of 1000 V to 1100 V, the inverter will enter the standby mode. When the input voltage decreases to a value within the MPPT operating voltage range of 180 V to 1000 V, the inverter will enter the normal mode.
- Make sure the maximum short-circuit current of DC side is within the permissible range.


Note: Recommend installing a disconnection protection device between the photovoltaic panel and the PV terminal for safety purpose.

Fig 5.6
Positive connector

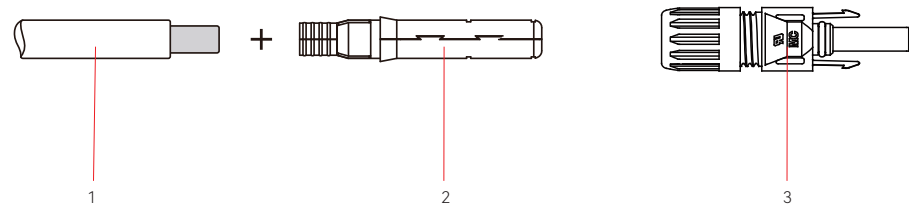

1.Insulated enclosure 2. Lock screw 3. Positive connector

Fig 5.7
Negative connector

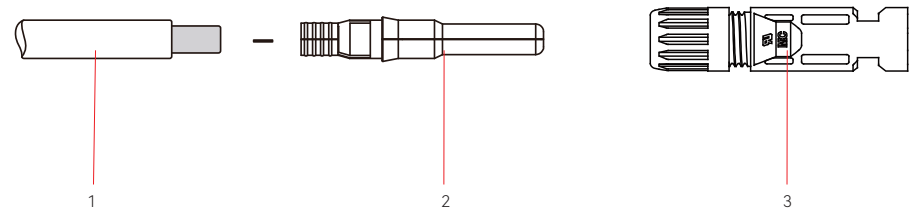

1.Insulated enclosure 2. Lock screw 3. Negative connector

Procedure

1. Tighten the lock screws on the positive and negative connectors.
2. Strip the insulation of the positive and negative cables by 8-10 mm.

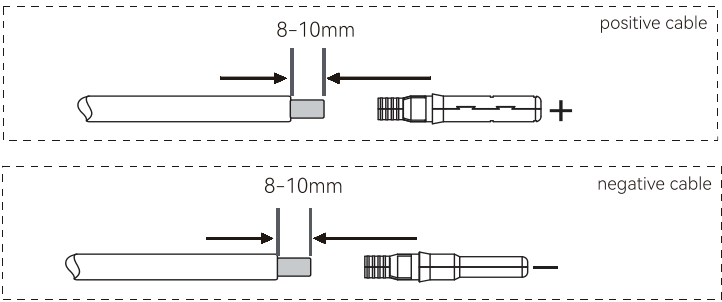


Fig 5.8
Stripping off the insulation skin of cables

3. Feed the positive and negative cables into corresponding lock screws.

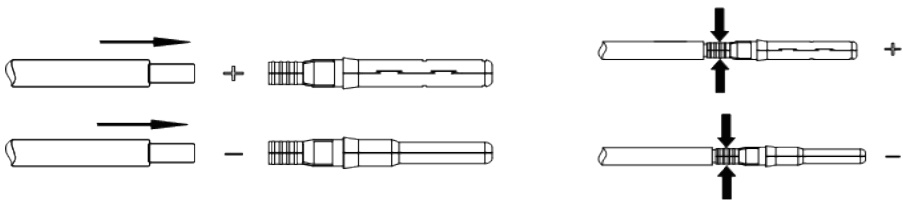


Fig 5.9
Inserting cables to lock screws

4. Insert the positive and negative connectors into positive cable and negative cable whose insulated enclosure has been stripped off, and crimp them tightly with a wire crimper.

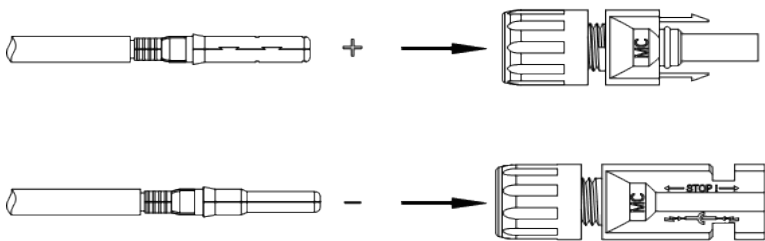


Fig 5.10
Inserting crimped cables to connectors

5. Tighten the lock screws on the positive and negative cable connectors.


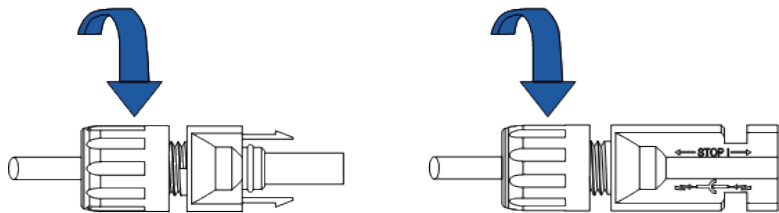


Fig 5.11
Securing the connectors

6. Make sure the DC switch is at the OFF position.

7. Insert the positive and negative cable connectors into the positive and negative PV ports on the inverter until you hear a “click” sound to ensure firm connection.


Fig 5.12
Plug in connectors

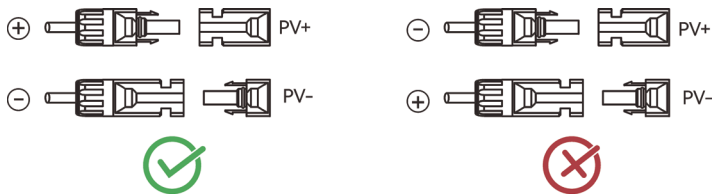

5.5 Communication Connection

5.5.1 Communication Terminal Overview

Fig 5.13
Communication terminal overview

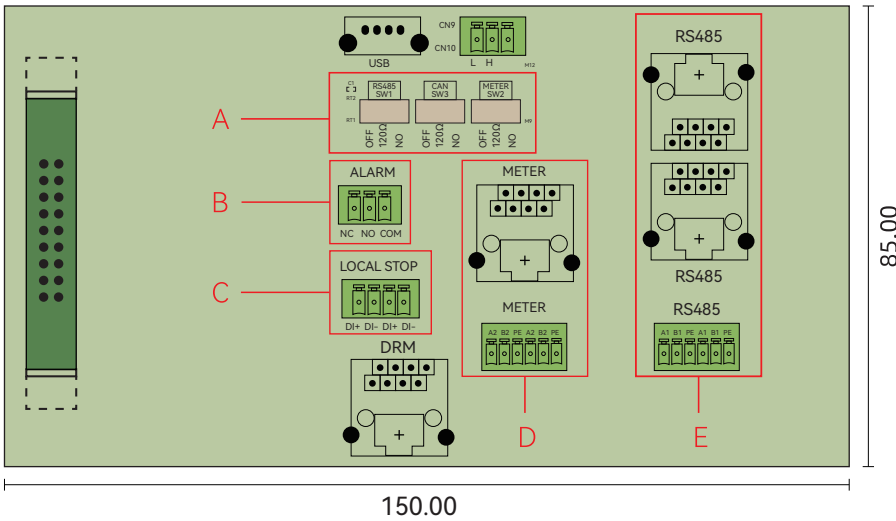


Position	Description
A	DIP Switch
B	Alarm Output Dry Contact
C	Emergency Stop Dry Contact
D	Meter Output
E	RS485 Communication Port

Table 5.8
Terminal description

5.5.2 Dry Contact Connection

Fig 5.14
Dry contact overview

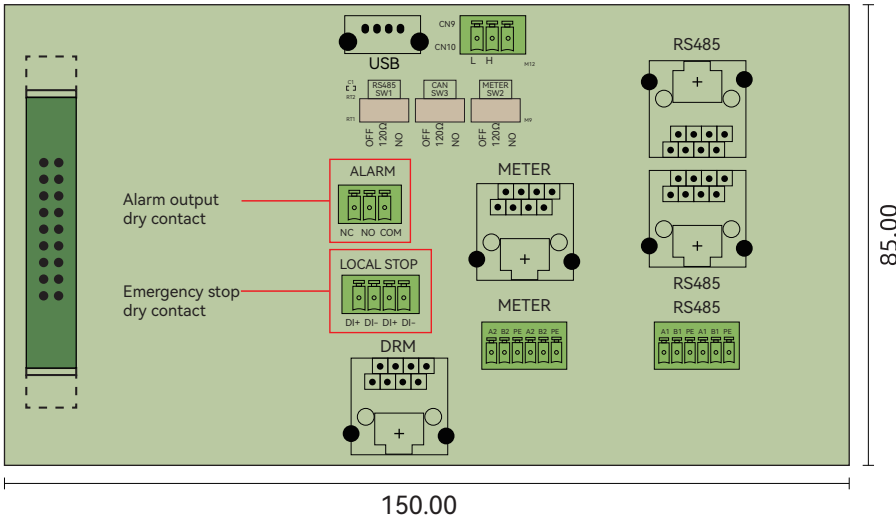

The inverter is integrated with alarm output dry contact and emergency stop dry contact.

Alarm output dry contact:

The relay can be set to normal open contact (COM&NO) or normal close contact (COM&NC). When the inverter is in alarm/fault state, the fault status can be indicated by LED indicator or other external display device.

- The LED indicator works as the alarm/fault indicator. When the relay is in normal close contact (NC) and no alarm/fault occurs, the LED indicator is on; When a fault occurs, the relay is in normal open contact (NO), and the LED indicator is off.

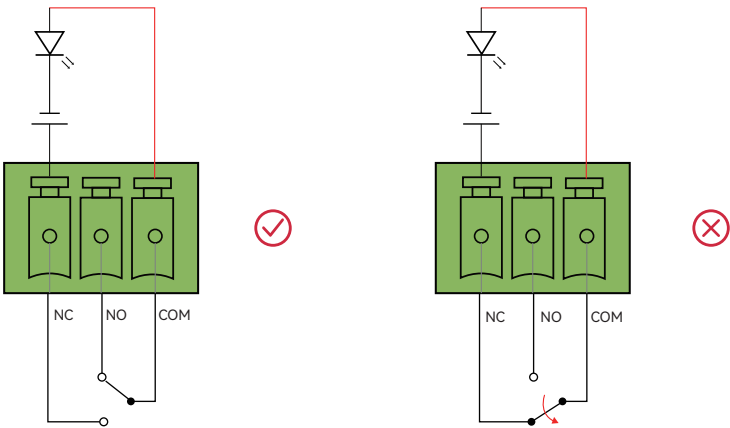


Fig 5.15
Relay is in normal close contact

- When the relay is on normal open contact (NO) and no alarm/fault occurs, the LED indicator is off; When a fault occurs, the relay is on normal close contact (NC), and the LED is on.

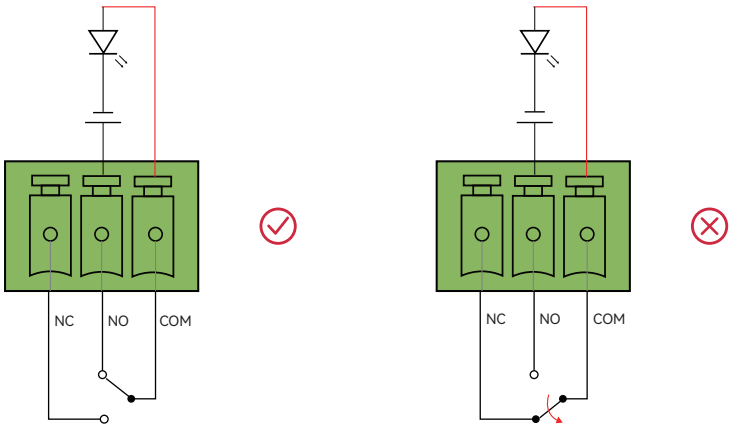


Fig 5.16
Relay is in normal open contact

Emergency stop dry contact:

The DI+ and DI- dry contact ports are provided for connecting an external circuit breaker, enabling emergency stop control of the inverter. These ports can be connected to the circuit breaker at the voltage of 24V. When the circuit breaker is activated (closed), it triggers an immediate shutdown of the inverter in emergency situations. The external circuit breaker can work as a rapid shutdown device (RSD) for the inverter.


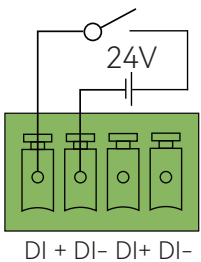


Fig 5.17
Emergency stop dry contact


Fig 5.18
Multiple-inverter dry contact

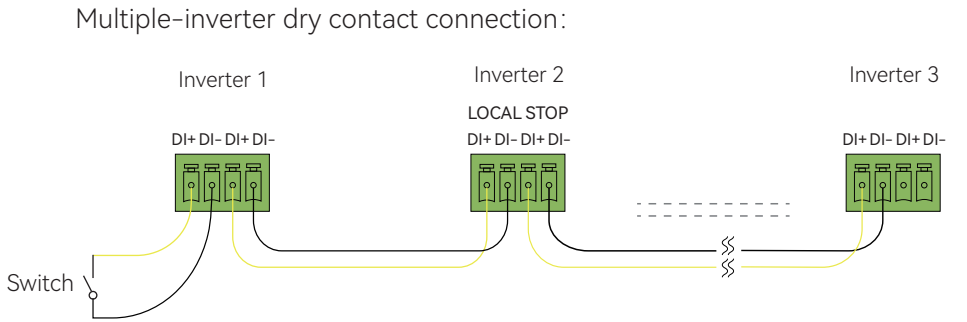

5.6
RS485 Communication
Connection

The inverter is integrated with an RS485 communication terminal and a meter communication terminal. The RS485 communication terminal is mainly for multiple inverters communication connected in a daisy chain manner. The meter communication terminal is mainly for data interaction between the monitoring device and the inverter.

Fig 5.19
RS485 communication

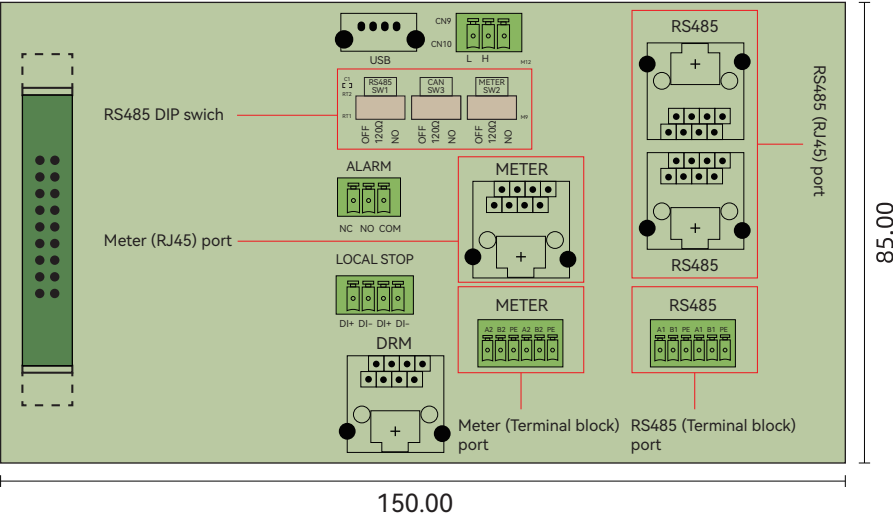

Note: Meter and RS485 communication have two kinds of interfaces: one is the RJ45 terminal, the other is the terminal block. The two ports provide the same function but with different wiring. Choose either interface for cable connection.

Table 5.9
RJ45 pin description

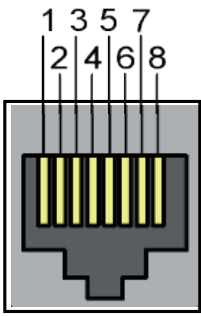


Fig 5.20
RS485 pin

DRM	
1	DRM 1/5
2	DRM 2/6
3	DRM 3/7
4	DRM 4/8
5	RefGen
6	Com/DRM 0
7	NC
8	NC

RS485	
1	NC
2	NC
3	NC
4	NC
5	NC
6	NC
7	RS485-A+
8	RS485-B-

Table 5.10
Terminal block description

Fig 5.21
RS485 terminal block




Terminal block:

Pin	name	Function
A1	RS485-A+	RS485 in, RS485A differential signal +
B1	RS485-B-	RS485 in, RS485B differential signal -
PE	PE	GND, shielded earthing point
A1	RS485-A+	RS485 in, RS485A differential signal +
B1	RS485-B-	RS485 in, RS485B differential signal -
PE	PE	GND, shielded earthing point

Note: When multiple inverters are connected, connect a terminating resistor between A1 and B1 by switching the RS485 DIP switch to ensure the communication quality.


Single inverter terminal block connection:

Fig 5.22
Single inverter terminal block

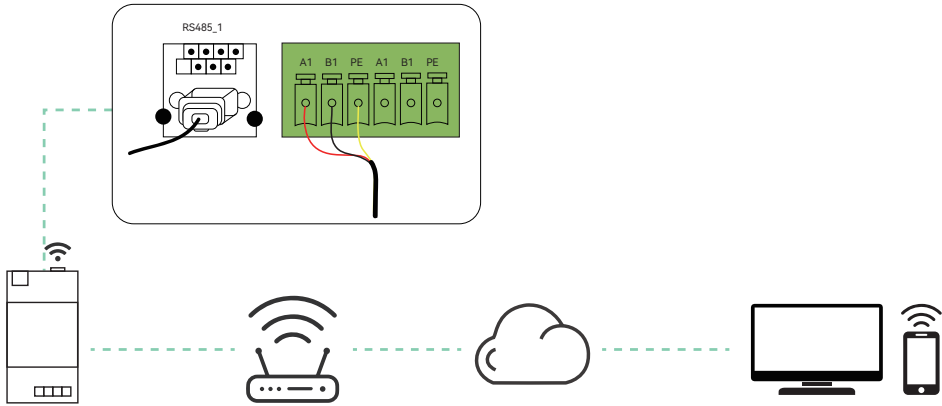

Multiple-inverter terminal block connection:

Fig 5.23
Multiple-inverter terminal block

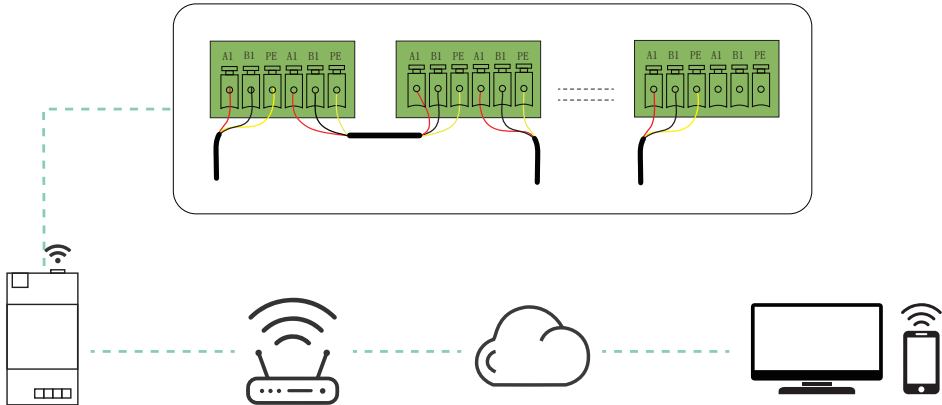

5.7 RS232/USB Connection

Figure5.24
RS232 pin

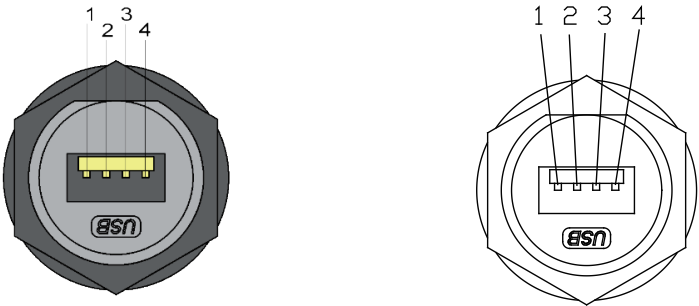


Table 5.11
USB pin definition

Pin Number	Description	Function
1	+5V	Power supply
2	RS-232 TX	Send data
3	RS-232 RX	Receive data
4	GND	Ground wire

This USB port can be connected with the eSolar Wi-Fi/4G/AIO3 communication module. For details, refer to the Quick Installation Guide of the communication module at <https://www.saj-electric.com/>.

Commissioning

6.1
Introduction of LED Panel

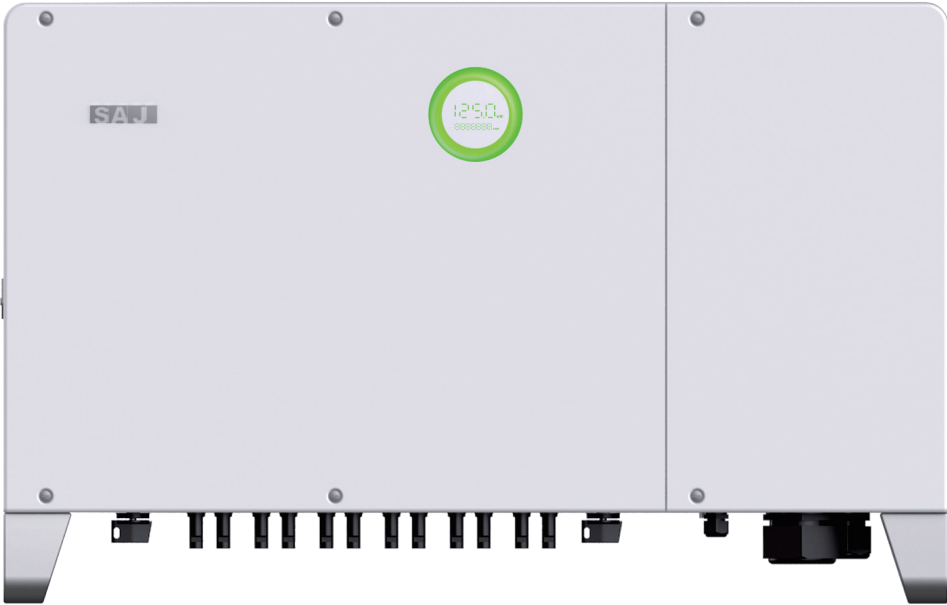


Fig 6.1
LED panel

Display	Status		Description
Ring Light		Solid Green	The inverter is in normal on-grid state.
		Breathing Mode	The inverter is in initialization or waiting state.
		Solid Red	An error occurs.
		Breathing Mode	Software is upgrading in the inverter.
		Off	The inverter is powered off.
LED Panel 1			Current power (kW)/ Error code
LED Panel 2			Total yield (kWh)

Table 6.1 LED indicators description

6.2

Installer APP Installation


The Elekeeper App can be used for both nearby and remote monitoring. Depending on the communication module used, it supports Bluetooth/4G or Bluetooth/Wi-Fi to communicate with your inverter. Search for “Elekeeper” in the App store and download the App. You can also scan the following QR code to download the App.



6.2.1

Set up Bluetooth Connection

Step 1. Activate the Bluetooth connection on your phone.
Step 2. Log in to the Elekeeper App, tap Service on the bottom menu and select **Remote Configuration**.
Step 3. Tap **Bluetooth** > **Next**, and select the **BlueLink** of the device from the **Pairable Devices**.
The BlueLink is named with the last five numbers of the communication module SN. For example, 00006.
Step 4. Select either the inverter under **Device** to set the inverter parameters or the module under **Communication Module** to configure the parameters of the communication module.

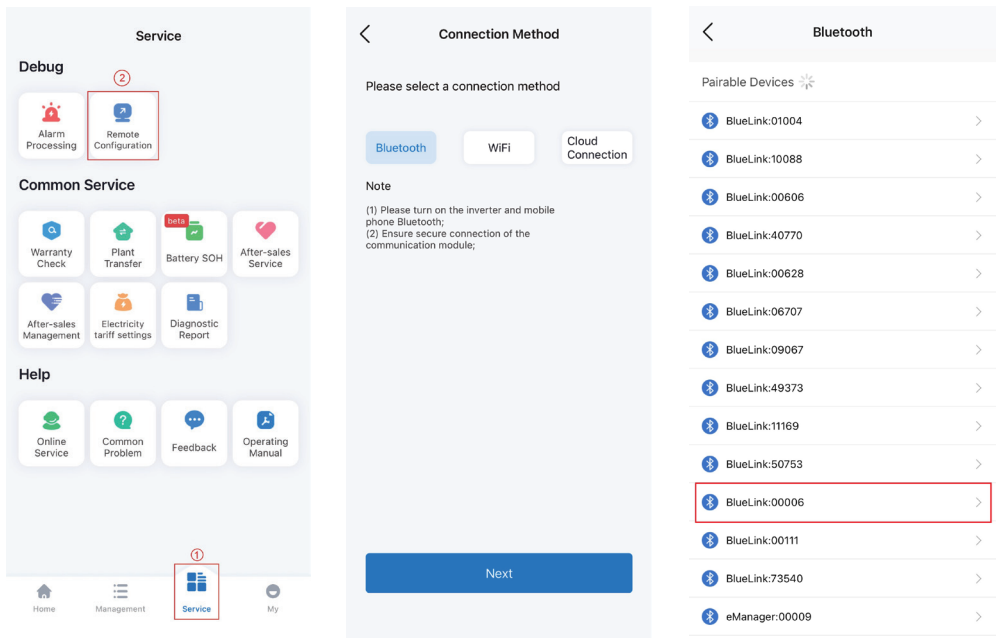


6.2.2

Complete the Initialization

Settings

To set the initialization parameters:
Step 1. Log in to the Elekeeper App and connect to the inverter through Bluetooth connection.
Step 2. On the **Device List** page, select the inverter under **Device**, and tap **Initialization**. For example:
Step 3. Set the following parameters:
• **Country**: The country where the inverter is installed.
• **Grid Compliance**: Select the applicable compliance of the country.
• **Inverter Time**: Tap **Auto Time Sync** to synchronize the inverter time with the time on your mobile phone. The default time is factory-set.
Step 4. Tap **Save**, and wait for a few minutes for the initialization to finish.

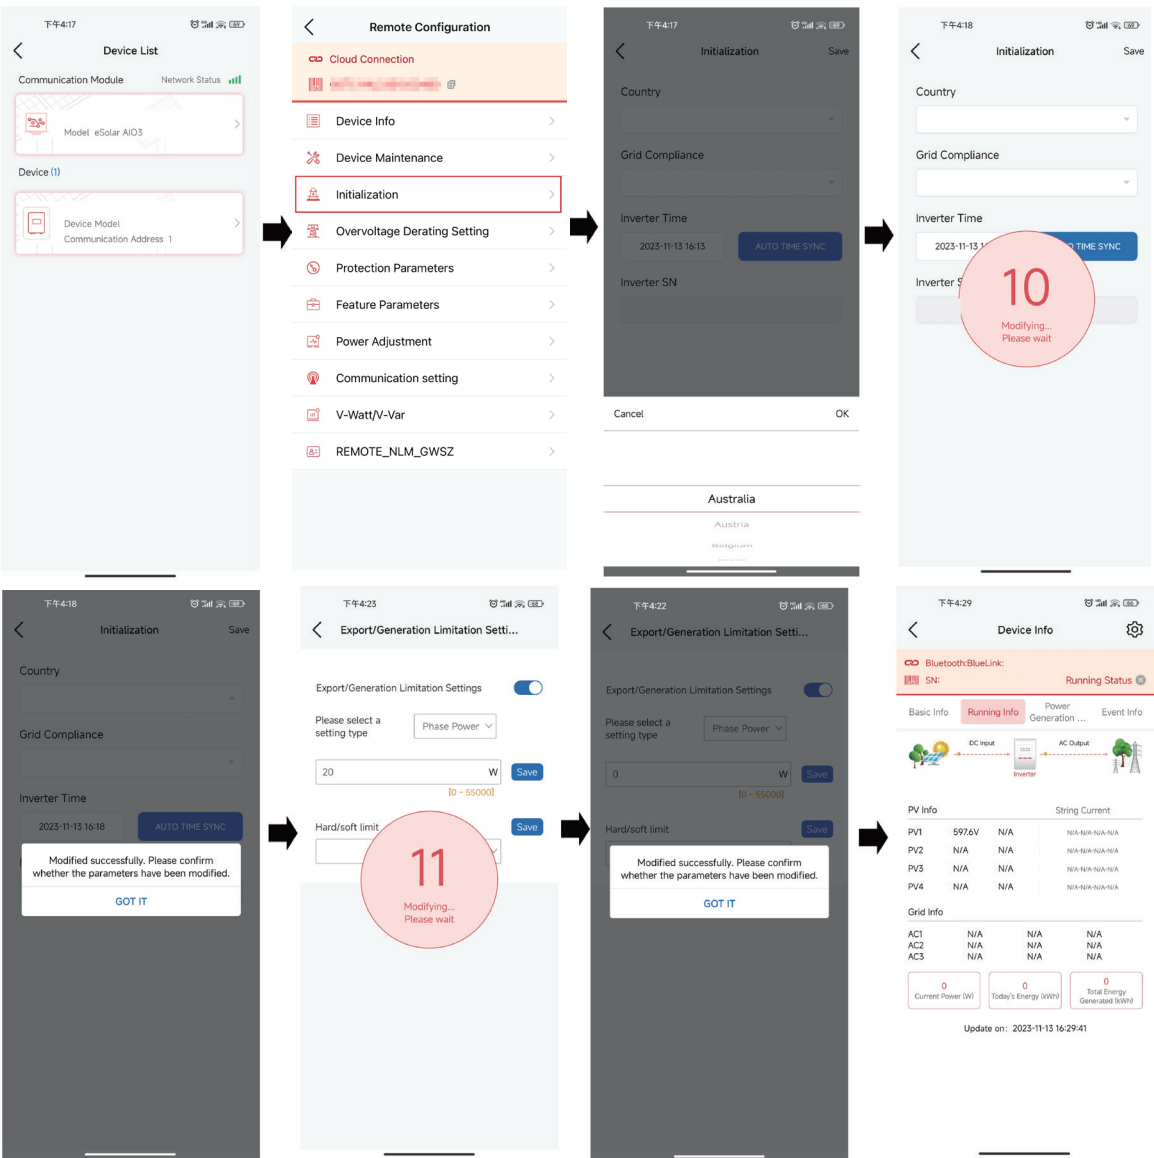

Error Code and Troubleshooting

7.1 Error Code

Error code	Error message
1	Master Relay Error
2	Master EEPROM Error
3	Master Temperature High Error
4	Master Temperature Low Error
5	Lost Communication M<->S
6	GFCI Device Error
7	DCI Device Error
8	Current Sensor Error
9	Master Phase1 Voltage High
10	Master Phase1 Voltage Low
11	Master Phase2 Voltage High
12	Master Phase2 Voltage Low
13	Master Phase3 Voltage High
14	Master Phase3 Voltage Low
15	Grid Voltage 10Min High
18	Master Grid Frequency High
19	Master Grid Frequency Low
21	Phase1 DCV High
22	Phase2 DCV High
23	Phase3 DCV High
24	Master No Grid Error
27	GFCI Error
28	Phase1 DCI High
29	Phase2 DCI High
30	Phase3 DCI High
31	ISO Error
32	Bus Voltage Imbalance
33	Master Bus Voltage High
34	Master Bus Voltage Low
35	Master Grid Phase Error
36	Master PV Voltage High
37	Master Islanding Error
38	Master HW Bus Voltage High
39	Master HW PV Current High
40	Master Self-Test Failed
41	Master HW Inv Current High

Error code	Error message
42	Master AC SPD Error
43	Master DC SPD Error
44	Master Grid NE Voltage Error
45	Master Fan1 Error
46	Master Fan2 Error
47	Master Fan3 Error
48	Master Fan4 Error
49	Lost Communication between Master and Meter
50	Lost Communication between M<->S
51	Lost Communication between inverter and Grid Meter
52	HMI EEPROM Error
53	HMI RTC Error
56	CT Device Err
57	AFCI Lost Com.Err
58	Lost Com. H<->S Err
61	Slave Phase1 Voltage High
62	Slave Phase1 Voltage Low
63	Slave Phase2 Voltage High
64	Slave Phase2 Voltage Low
65	Slave Phase3 Voltage High
66	Slave Phase3 Voltage Low
67	Slave Frequency High
68	Slave Frequency Low
73	Slave No Grid Error
74	Slave PV Input Mode Error
75	Slave HW PV Curr High
76	Slave PV Voltage High
77	Slave HW Bus Volt High
81	Lost Communication D<->C
83	Master Arc Device Error
84	Master PV Mode Error
85	Authority expires
86	DRM0 Error
87	Master Arc Error
88	Master SW PV Current High

7.2
Troubleshooting

Error info	Troubleshooting
Relay Error	If this error occurs frequently, please contact your distributor or call SAJ technical support.
Storage Error	If this error occurs frequently, please contact your distributor or call SAJ technical support.
High Temperature Error	Check whether the radiator is blocked, whether the inverter is in too high or too low temperature, if the above mentioned is in normal, please contact your distributor or call SAJ technical support.
GFCI Device Error	If this error occurs frequently, please contact your distributor or call SAJ technical support.
DCI Device Error	If this error occurs frequently, please contact your distributor or call SAJ technical support.
GFCI Devices Error	If this error occurs frequently, please contact your distributor or call SAJ technical support.
DCI Devices Error Master	If this error occurs frequently, please contact your distributor or call SAJ technical support.
DCI Devices Error Master	If this error occurs frequently, please contact your distributor or call SAJ technical support.
AC Voltage Error	· Check the volt. of the grid · Check the connection between the inverter and the grid. · Check the settings of the on-grid standards of the inverter. · If the volt. of the grid is higher than the volt. regulated by local grid, please inquire the local grid workers whether they can adjust the volt. at the feed point or change the value of the regulated volt. · If the volt. of the grid is in regulated range as allowed and LCD still in this error, please contact your distributor or call
Frequency Error	Check the setting of country and check the frequency of the local grid. If the above mentioned are in normal, please contact your distributor or call SAJ technical support.

Error info	Troubleshooting
Grid Lost Error	Check the connection status between the AC side of the inverter and the grid, if the above mentioned are in normal, please contact your distributor or call SAJ technical support
GFCI Error	Check the insulation resistance of the positive side and negative side of the solar panel; check whether the inverter is in wet environment; check the grounding of the inverter. If the above mentioned are in normal, please contact your distributor or call SAJ technical support.
DCI Error	If this error exists always, please contact your distributor or call SAJ technical support.
ISO Error	Check the insulation resistance of the positive side and negative side of the solar panel; check whether the inverter is in wet environment; check whether the grounding of the inverter is loose or not. If the above mentioned are in normal, please contact your distributor or call SAJ technical support.
Overcurrent	Check the connection status between the inverter and the grid and test whether the volt. of the grid is stable or not, if the above mentioned are in normal, please contact your distributor or call SAJ technical support.
Over Bus Voltage	Check the settings of the solar panel. SAJ designer can help you. If the above mentioned are in normal, please contact your distributor or call SAJ technical support.
PV Overcurrent	If this error always exists, please contact your distributor or call SAJ technical support.
PV Voltage Fault	Check the settings of the solar panel. SAJ designer can help you. If the above mentioned are in normal, please contact your distributor or call SAJ technical support.
Lost Communication	Check the connection of communication cables between control board and display board. If the above mentioned are in normal, please contact your distributor or call SAJ technical support.
Null line-to-earth voltage fault	Check if connection of the AC output grounding terminal is stable and reliable. If the content mentioned as above is normal, please contact your distributor or call SAJ technical support.



Routine Maintenance



8.1

Routine Maintenance

Inverter Cleaning

Clean the enclosure lid and LED indicator of the inverter with moistened cloth with clear water only. Do not use any cleaning agents as it may damage the components.

Heat Sink Cleaning

Clean the heat sinks with dry cloth or air blower. Do not clean the heat sink with water or cleaning agents. Make sure there is enough space for ventilation of the inverter.

Appendix

9.1

Recycling and Disposal

This device should not be disposed as residential waste. An inverter that has reached the end of its life and is not required to be returned to your dealer must be disposed carefully by an approved collection and recycling facility in your area.

9.2

Warranty

Check the product warranty conditions and terms on the SAJ website:
<https://www.saj-electric.com/>

9.3

Contacting support

Guangzhou Sanjing Electric Co., Ltd.

Address: SAJ Innovation Park, No.9, Lizhishan Road, Guangzhou Science City, Guangdong, P.R.China.

Postcode: 510663

Website: <https://www.saj-electric.com/>

Technical Support & Service

Tel: +86 20 6660 8588

Fax: +86 206660 8589

E-mail: service@saj-electric.com

International Sales

Tel: 86-20-66608618/66608619/66608588/66600086

Fax: 020-66608589

E-mail: info@saj-electric.com

China Sales

Tel: 020-66600058/66608588

Fax: 020-66608589

9.4

Trademark

SAJ is the trademark of Sanjing.